

PRODUCT DATA SHEET

## **ABB E-mobility**

## Terra DC Wallbox UL



The Terra DC Wallbox is a compact DC fast charger rated up to 24 kW, perfect for auto dealerships, retail parking lots, fleets, workplace facilities, and retail parking.

With its low-power, high-voltage architecture, the Terra DC Wallbox can be installed at sites with defined or limited available power service – while offering 920 VDC charging capability for every EV model.

#### Future-proof "Destination DC" charging

The Terra DC Wallbox is a compact 24 kW DC fast charger with one or two outlets supporting CCS and CHAdeMO protocols.

Operating the Terra DC Wallbox is easy thanks to a full color, daylight readable touchscreen display. This includes starting and stopping of charge sessions, progress indication during charging, help menus, language selection, and PIN code access control.

As connectivity is the key to successful EV charging installations, the Terra DC Wallbox features ABB Ability Connected Services to enable authentication, payment, monitoring, remote diagnostics and repair, as well as over-the-air updates and upgrades.

#### **Applications**

- Commercial, retail parking
- · Automotive dealers
- · Right-of-way parking
- · Office, workplace, campus
- · Delivery fleets
- High voltage battery EV fleets
- · Sites with sensitive load concerns

#### Benefits of low power DC solutions

Low power DC is an ideal solution for use cases demanding shorter charging times and higher charging asset utilization than can be provided by AC charging solutions. With a 24 kW compact DC solution, charging needs can be met in balance with load demands and infrastructure costs.

In AC charging solutions, the EV's onboard converter is usually the limiting factor on the charging power that can be supplied to the car. With typical onboard ratings ranging from 3 kW to 11 kW, any additional power the AC charger could provide is left unused. With the Terra DC Wallbox, 24 kW peak DC power is provided directly to the battery, bypassing the limitations of an EV's onboard converter.

#### High voltage charging capabilities

As electric vehicles and their use cases grow, high voltage DC charging has become more important to increase charging power while ensuring the highest safety, usability and utilization from charging assets. The Terra DC Wallbox can meet EV battery capabilities up to 920 VDC to enhance power output across a wider range of today's and tomorrow's EVs, including both passenger and fleet vehicles.

#### Main features

- Future-proof DC output voltage range from 150 to 920 VDC supporting EVs today and in the future
- · Enables CCS1 only or CCS1 and CHAdeMO
- Daylight readable 7" full color touchscreen display
- Future proof connectivity:
  - OCPP 1.6 and Smart Charging Profiles
  - Capability for remote services and updates
- Compact design
- Robust all-weather enclosure for indoor and outdoor use
- RFID reader
- ENERGY STAR® Certified

#### **Key optional features**

- · On-screen PIN code authorization
- Input current limiting software to match site requirements
- Web tools for statistics, configuration, access management, remote diagnostics and repair
- Integration with back offices and payment platforms
- Customized branding possibilities
- · Pedestal mounted option available

#### **Configurations**

The Terra DC Wallbox is available in the following configurations:

- Single outlet CCS1
- Dual outlet CCS1 + CHAdeMO
- Single-phase, 208-240 VAC
- Three-phase, 480 VAC





Specifications	
Electrical	
AC Input voltage range	(1) 208-240 VAC +/- 10% (60 Hz) (2) 480Y / 277 VAC +/- 10% (60 Hz)
AC input power connection	(1) 1-phase: L1, L2, GND (2) 3-phase: L1, L2, L3, N, GND
AC input current* and max power	(1) 100 A; 20.8-24 kVA (2) 32 A; 26.6 kVA 35 A; 26.6 kVA at 432 VAC (-10% dip) Current limiting options available
Recommended upstream circuit breaker	(1) 125 A (2) 50 A
Power Factor*	>0.96
Current THD*	IEEE 519 Compliant; 5%
DC output power	(1) 19.5 kW at 208 V (1) 22.5 kW at 240 V (2) 24 kW peak; 22.5 kW continuous
DC output voltage	CCS1: 150 - 920 VDC CHAdeMO: 150 - 500 VDC
DC output current	60 A
Efficiency*	94%
Interface and Control	
Charging protocols	CCS1-only and CCS1+CHAdeMO
User interface	7" full color touchscreen display
RFID system	ISO/IEC14443A/B, ISO/IEC15693, NFC reader mode, Mifare, Calypso
Network connection	GSM / 4G modem 10/100 Base-T Ethernet
Communication	OCPP 1.6 Core and Smart Charging Profiles; Autocharge via OCPP
Support languages	English (others available on request)
Environment	
Operating temperature	-35 °C to +45 °C (+45 °C to +55 °C with linear derating)
Recommended storage conditions	-10 °C to +70 °C / 14 °F to +158 °C (dry environment)
Protection	IP54, NEMA 3S; indoor and outdoor
Humidity	5% to 95%, non-condensing
Altitude	2500 m (8200 ft)
General	
Charge cable	7 m (23 ft)
Dimensions (H x W x D)	770 x 584 x 300 mm / 30.3 x 23 x 11.8 in
Weight	60kg / 132 lbs excluding backplate (10 kg / 22 lbs) and cables
ENERGY STAR Certification	Yes
Compliance and safety	UL 2202, CSA No. 107.1-16, NEC Article 625, EN 61851, EN 62196; CHAdeMO 1.2; DIN 70121, ISO 15118; IEC 61000-6-3, (2) EMC Class B

- (1) Single phase configuration
- (2) Three phase configuration
- \* Data shown at nominal output power

#### **ABB E-mobility Inc.**

950 W Elliott Road, Suite 101 Tempe, AZ 85284 United States

Phone: 800-435-7365 E-mail: US-evci@abb.com

#### ABB E-mobility Inc.

800 Hymus Boulevard Saint-Laurent, QC H4S 0B5

Phone: 800-435-7365 E-mail: CA-evci@abb.com We reserve the right to make technical changes or modify the contents of this document without prior notice. We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB. Copyright® 2023 ABB. All rights reserved.



MANUAL: NORTH AMERICA

## **Terra DC Wallbox**

## Single-phase Version Installation Manual

Revision 2.7





Revision	Change Date	
level		
2.1	Added revision level to document and added revision table	4-15-2021
2.2	Added ferrite information and changes pictures 10-22-2021	
2.3	Added GID for optional gun holster – different connector type	03-16-2022
2.4	Added GID for minimal gun holster spare codes 03-31-2022	
2.5	Added instructions to mounting gun holster	05-04-2022
2.6	Energy Star logo on the cover page	05-05-2023
2.7	Par. 5.4.1 note about number of people required to lift the DCWB	06-20-2023

## **Notice**

This document contains information about one or more ABB products and may include a description of or a reference to one or more standards that may be generally relevant to the ABB products. The presence of any such description of a standard or reference to a standard is not a representation that all of the ABB products referenced in this document support all of the features of the described or referenced standard. In order to determine the specific features supported by a particular ABB product, the reader should consult the product specifications for the particular ABB product.

ABB may have one or more patents or pending patent applications protecting the intellectual property in the ABB products described in this document.

The information in this document is subject to change without notice and should not be construed as a commitment by ABB. ABB assumes no responsibility for any errors that may appear in this document.

In no event shall ABB be liable for direct, indirect, special, incidental or consequential damages of any nature or kind arising from the use of this document, nor shall ABB be liable for incidental or consequential damages arising from use of any software or hardware described in this document.

This document and parts thereof must not be reproduced or copied without written permission from ABB, and the contents thereof must not be imparted to a third party nor used for any unauthorized purpose.

## Copyrights

All rights to copyrights, registered trademarks, and trademarks reside with their respective owners. Copyright @ 2018 ABB.

All rights reserved.



## Contents

1	Intro	duction		6	
	1.1	Preface			
	1.2	Intended document users			
	1.3	Terra DC Wallbox hardware ordering details			
	1.4	Signs			
		1.4.1	Owner responsibilities	8	
		1.4.2	Tilting and handling	8	
		1.4.3	Sharp edges	9	
		1.4.4	Electric hazards	9	
		1.4.5	Installation safety	9	
	1.5	Environm	nent and disposal of waste	9	
2	Desci	ription of th	he product	10	
	2.1	Overview	v of the system	10	
		2.1.1	Complete overview	10	
		2.1.2	External view	11	
		2.1.3	Inside view	12	
3	Insta	llation Plan	nning and Design	13	
	3.1	Internet o	connection	13	
		3.1.1	Internet via cellular connection	13	
		3.1.2	Internet via ethernet connection	13	
	3.2	Electrical	requirements	13	
		3.2.1	Required electrical grid configuration		
		3.2.2	Overcurrent protection device		
		3.2.3	Conduit for power input wires		
		3.2.4	Specification for power input wires		
		3.2.5	Conduit for ethernet cable		
		3.2.6	Specification for ethernet cable		
	3.3	DC Wallbox placement			
		3.3.1	Charging cable reach		
		3.3.2	DC Wallbox position with respect to parking space		
		3.3.3	Required space for installing and maintaining the DC Wallbox		
		3.3.4	Ventilation and airflow required for the DC Wallbox		
		3.3.5	Considerations for where to position DC Wallbox vertically	19	
4	Insta	Installation instructions			
	4.1		nstruction		
	4.2	Instructio	on for a wall bearing		
		4.2.1	Mounting on a pedestal		
	4.3		ed		
	4.4	Internet o	connection	20	
5	Recei	_	ng and connecting		
	5.1	_	g the Wallbox		
	5.2	Unpackin	ng the charging and mounting preparations		
		5.2.1	Unpacking		
		5.2.2	Mounting preparations		
	5.3	Move cab	oinet to position	23	



		5.3.1	Options	23
	5.4	Mounti	ing the Terra DC Wallbox	23
		5.4.1	Mounting the Terra DC Wallbox	23
		5.4.2	Install cable gland(s) or connect conduit to the unit	27
	5.5	Connec	ct cables	29
		5.5.1	Connect PE of power cable	29
		5.5.2	Connect power cable	
	5.6	Instru	ction for Mounting the DC Wallbox Gun Holders	30
		5.6.1	General	30
		5.6.2	General description	30
		5.6.3	Mounting instructions	31
6	Comr	nissionin	ng	33
	6.1	Commi	issioning preparation	33
7	Main	tenance	and Cleaning of the cabinet	34
	7.1	Recomi	mended Periodic maintenance	34
	7.2	Cleanin	ng of the cabinet	34
8	Techn	nical Data	a	35
	8.1	Electric	cal data	35
	8.2	Mechai	nical data	36
	8.3	Environ	nment	36
	8.4	Certific	cations	36
9	Conta	act inforn	mation	37
10	) Appe	ndix A –	Mounting points	38
			C Wallbox Charger wall mounting	
11	Appe	ndix B - [	Disposal instruction	39
	11.1		ve on Waste Electrical and Electronic Equipment (WEEE – 2012/19/EU)	
12	. Appe	ndix C –	Pedestal requirements	40



#### Glossary

AC

Alternating Current.

CCS

Combined Charging System. This is the name of the charging protocol of European and North American car makers.

CHAdeMO

DC fast charging method for electric vehicles.

Contractor

Entity hired by the owner / site operator to do engineering, civil and electrical installation work.

DC

Direct Current.

EV

Electric Vehicle.

Grid provider

Company responsible for the transportation and distribution of electricity.

HMI

Human Machine Interface; the display/screen on the charger.

NOC

ABB Network Operating Centre; remotely checks the correct functioning of the charger.

Owner

The legal owner of the charger.

**OCPF** 

Open Charge Point Protocol. Open standard for communication with charge stations.

PΕ

Protective Earth.

PPE

Personal Protective Equipment. Equipment such as safety shoes, helmet, glasses, gloves.

RCD

Residual Current Device. Breaks the connection if a residual current is detected.

#### **RFID**

Radio-Frequency IDentification. RFID is a communication technology by means of radio waves to transfer data over a very short distance between a reader and an electronic tag or card.

#### Site operator

This entity is responsible for the day to day control of the charger. The site operator can be the owner, but not necessarily.

#### User

The owner of an electric vehicle, who uses the Charge Station to charge that vehicle.





## 1 Introduction

## 1.1 Preface

This guide provides an overview for the installation of the Terra DC Wallbox.

The Terra DC Wallbox charging station is an easy to install DC fast charger for electric vehicles. Fast chargers are electrical installations with high electric currents. Therefore, the installation must be planned carefully, and must be done by certified personnel only (according to local standards). Local regulations shall take precedence if they list different installation requirements than prescribed in this Installation Manual.

The Terra DC Wallbox is offered in a variety of configurations and with multiple connector types. The different versions are described in section 1.3.

Before installing the Terra DC Wallbox, read this installation guide carefully and attentively. Be sure to follow all instructions when installing the charger. ABB is not responsible for any damage caused by not following or incorrectly executing the instructions described in this manual.

## 1.2 Intended document users

This document is intended to be used by:

- Customers who have purchased a Terra DC Wallbox or customers in the process of ordering and require additional details on installation.
- Contractors who are responsible for site preparation and/or installation of a Terra DC Wallbox.

## 1.3 Terra DC Wallbox hardware ordering details

ABB's Terra DC Wallbox single-phase is offered in the following configurations:

- Terra DC Wallbox C UL
- Terra DC Wallbox J UL
- Terra DC Wallbox CJ UL
- C CCS-1 (Combo) standard
- J CHAdeMO standard
- CJ CCS-1 (Combo) standard and CHAdeMO standard

All variations are offered with charging cable lengths up to 7 meters (23 ft). The Terra DC Wallbox comes with the standard connector holsters as shown.

Charging cable type	ABB order code (**)
CCS-1	ABB6AGC076604
CCS-1 (*)	ABB6AGC109619
CHAdeMO	ABB6AGC102972

 $<sup>^{(**)}</sup>$  the codes are referred to the spare parts. Minimal gun holster is included in the packaging

(\*) CCS-1 minimal holster to be use in combination with products:

ABB6AGC107060	TWB UL 24 C 7M-7M-0-0
ABB6AGC107059	TWB UL 24 C 3M-7M-0-0



2023-20-06 6/40

ABB6AGC107314	TWB UL 24 CJ 7M-7M-0-0
ABB6AGC109857	TWB UL 24 CJ 3M-7M-0-0

Optional connector holsters shown below may be purchased separately with the order code details shown below.





Charging cable type	ABB order code
CCS-1	ABB6AGC076604
CCS-1 (*)	ABB6AGC109619
CHAdeMO	ABB6AGC076601

(\*) CCS-1 optional holster to be use in combination with products:

ABB6AGC107060	TWB UL 24 C 7M-7M-0-0
ABB6AGC107059	TWB UL 24 C 3M-7M-0-0
ABB6AGC107314	TWB UL 24 CJ 7M-7M-0-0
ABB6AGC109857	TWB UL 24 CJ 3M-7M-0-0

## 1.4 Signs

The following signs are used on the equipment and in this manual:



DANGER

Hazardous voltage

Identifies a hazard that could result in severe injury or death through electrocution.



WARNING

Various

Identifies a hazard that could result in severe injury or death.



WARNING

Rotating parts

Identifies a hazard that could result in injury due to the presence of rotating or moving parts.

2023-20-06 7/40



WARNING Pinch Hazard

Identifies a hazard that could result in injuries, in which some body parts are pinched or crushed.



**CAUTION** 

Various

Identifies a hazard that could result in damage to the machine, other equipment, and/or environmental pollution.



#### CAUTION

Environmental damage

Identifies a hazard that could result in environmental damage and/or environmental pollution.



#### NOTICE

Contains remarks, suggestions or advice.

### 1.4.1 Owner responsibilities

The owner and site operator are required to:

- Operate the charge station with the protective devices installed and to ensure all protective devices are correctly installed after carrying out installation or maintenance work.
- Write an emergency plan that instructs people what to do in case of emergency.
- Prepare the site where the charge station will be installed according to the requirements described in this guide.
- Ensure there is sufficient space around the charger to carry out maintenance work.
- Appoint a person responsible for the safe operation of the charge station and for the coordination of all work.

The owner is cautioned that changes or modifications not expressly approved by ABB could void the owner's authority to operate the equipment and ABB's warranty policy.

Neither ABB nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs or expenses incurred by purchaser or third parties as a result of: an accident, misuse or abuse of this product or unauthorized modifications, repairs or alterations to this product, or failure to strictly comply with ABB's operating and maintenance instructions.

### 1.4.2 Tilting and handling



WARNING

Heavy equipment

The Terra DC Wallbox weighs approximately 70 kg. Follow the handling Instructions:

- 1. Two people are recommended for the installation and wall-mounting of a Terra DC Wallbox.
- 2. Do not drop the Terra DC Wallbox.

2023-20-06 8/40

### 1.4.3 Sharp edges



WARNING

Sharp metal edges

There could be sharp metal edges inside the Terra DC Wallbox. It is recommended to wear mash protecting gloves when working inside the charger.

#### 1.4.4 Electric hazards



DANGER

Hazardous voltage

The Terra DC Wallbox contains conductors under hazardous electrical voltages. The grid terminals on the internal DIN rail may carry hazardous voltages, even if all circuit breakers are switched off.

## 1.4.5 Installation safety



**DANGER** 

Hazardous voltage

Instructions:

- 1. Always switch off the input circuit feeding the unit, (external disconnect or breaker) before performing any installation, disassembly, repair or replacement of components. Follow appropriate requirements for safe work practices, including but not limited to NFPA-70e.
- 2. Perform a voltage check to ensure electrical power is disconnected from the system.
- 3. Only ABB certified technicians should commission the Terra DC Wallbox.
- 4. When the system is in an open or dangerous condition, do not allow unqualified persons to go near it. Instruct and warn people about the potentially harmful high voltages.
- 5. The installation and maintenance personnel must supply their own lighting equipment because the Terra DC Wallbox has no lights inside the cabinet
- 6. Always connect the Protective Earth (PE) first, before connecting the other power input wires.
- 7. Be sure to properly and securely reassemble the Terra DC Wallbox's enclosure after installation or service operations.
- 8. When handling the equipment, a proper lifting device should be used in accordance with your local EHS policies.

## 1.5 Environment and disposal of waste



NOTICE


Always follow the local rules and regulations regarding disposal of any (non-reusable) Terra DC Wallbox parts.

2023-20-06 9/40

## 2 Description of the product

## 2.1 Overview of the system

## 2.1.1 Complete overview

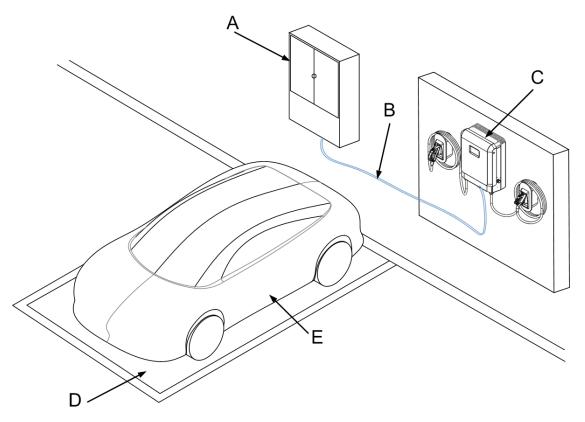


## Example of a complete installation

- A Power distribution board of the owner
- B Cables in conduit
- C Terra DC Wallbox
- D Parking space for charging
- E Electric vehicle

2023-20-06 10/40

## 2.1.2 External view

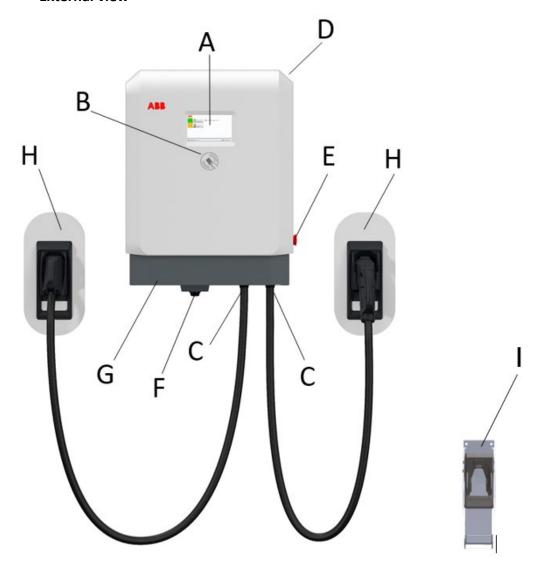

- A Display / HMI
- B RFID card reader
- C DC Charging cable
- D Air outlet

- E Emergency stop button
- F AC input connection point for Conduit
- G Air inlet
- H Optional Holster (purchased separately)
- I Standard Holster (included)




Standard charging cable holster supplied with DC wallbox



Optional charging cable holster sold separate from DC wallbox

2023-20-06

## 2.1.3 Inside view

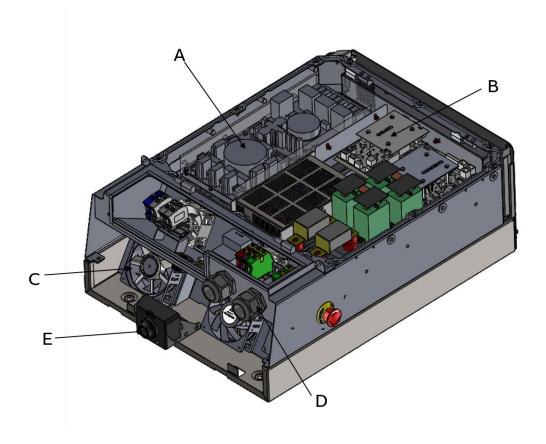

- A AC input board
- B CPI and IMI boards
- C External Fan (2x)

D Cable gland for DC output(2x) E Cable gland for AC input

2023-20-06 12/40

## 3 Installation Planning and Design

This section provides several considerations for the DC Wallbox installation planning and design, which are to be made by the customer to ensure a successful project.

### 3.1 Internet connection

ABB requires an internet connection to the DC Wallbox to conduct remote service operations including, oversight of the product during the warranty period, diagnosis and troubleshooting of issues, and performing software firmware update. Not having internet connection to the DC Wallbox may severely impact, or even void, the product warranty and/or ABB's service level agreement (SLA).

It is the installer's responsibility to ensure reliable internet connection to the DC Wallbox is made. Contingency planning and the associated costs are the responsibility of the installer.

#### 3.1.1 Internet via cellular connection

The preferred method of establishing internet connection to the charger is using the charger's standard featured hardware with ABB's Charger Connect service offering, which provides internet access via Vodafone's 4G LTE wireless network.

In the USA, Vodafone primarily roams on the AT&T and T-Mobile 4G LTE networks. It is expected that a cellular availability test is performed prior to construction to ensure there is reasonable signal quality to at least one of the AT&T and T-Mobile 4G LTE bands 2 (1900 MHz), 4 (1700/2100MHz), or 12 (700 MHz).

The signal strength must be greater than -85dbm and should be measured with a cellular network signal meter, such as a Squid-4G or Sure Call device. Handheld mobile phones are not recommended for assessing signal strength since they are not reliable measuring devices.

The DC Wallbox only supports SIM cards provided by ABB. Customer procured SIM cards are not supported.

#### 3.1.2 Internet via ethernet connection

Internet connection to the charger may be performed by connecting an ethernet cable to the charger from other on-site IT infrastructure. However, due to the scope of work required for integrating this solution to ensure secure communication, this method is typically not preferred.

ABB may require additional commissioning fees if ethernet cable method for establishing internet is used, depending on the situation. Please contact your ABB sales representative for more details.

See sections 3.2.5 and 3.2.6 for more details on connection of conduit carrying ethernet cable and specification of the ethernet cable.

## 3.2 Electrical requirements




CAUTION

The installation company is responsible to design and install the electrical installation according to the local regulations.


2023-20-06 13/40

### 3.2.1 Required electrical grid configuration

Is essential that the DC Wallbox 1-phase input variant is installed in the proper electrical grid configuration. The allowable grid configurations are shown in the figures below. Please observe the 1-phase variant DC Wallbox supports two different grid configurations. For the 1-phase variant DC Wallbox, ABB recommends the electrical designer to consider power distribution phase balancing design requirements.

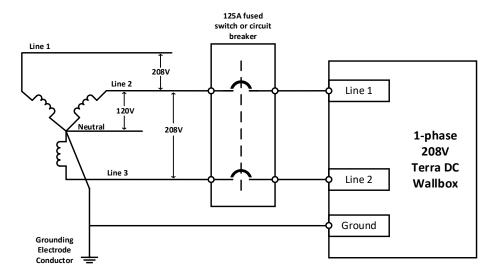

One of two electrical grid configurations acceptable for use with 1-phase, DC Wallbox UL variant ( $1\phi$ , 208V input)

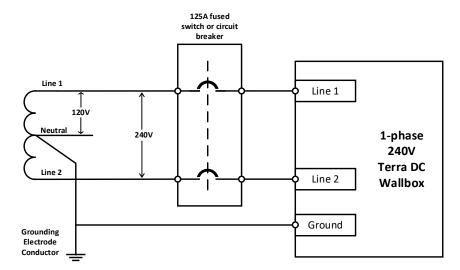

One of two electrical grid configurations acceptable for use with 1-phase, DC Wallbox UL variant (1ø, 240V input)

2023-20-06 14/40

## NOTICE:

The grid connections shown for the various configurations of the DC Wallbox are mandatory. Failure to adhere to these instructions may partially or fully void the product warranty, result in a costly site visit to reconfigure the grid configuration, and/or cause several site visits for the DC Wallbox commissioning. ABB is not responsible for scheduling delays and additional costs from not properly planning the installation. If ABB is contracted to perform the DC Wallbox commissioning, ABB observes the right to charge additional money for more than one site visit required for the commissioning due to an initial, improper installation of the DC Wallbox.

Important steps to ensure project success include:

- 1. Identify the grid configuration at the location where the DC Wallbox will be installed. If the grid configuration available is not okay for use with the DC Wallbox, then determine how to establish the required grid connection. A transformer solution offered by ABB is available to derive the required grid configuration when the required grid configuration is not available. Contact your local ABB sales representative for more details.
- 2. Select the 1-phase variant of the DC Wallbox according to Section 1.3 titled Terra DC Wallbox hardware ordering details based on Step 1 above.
- 3. Carefully execute a project plan to ensure the correct variant of DC Wallbox is used on the project and that the project site's grid configuration is compatible with the DC Wallbox.
- 4. Verify the actual grid configuration the DC Wallbox is installed in matches the described criteria during the DC Wallbox commissioning.

#### 3.2.2 Overcurrent protection device

Both variant of the DC Wallbox is recommended to be fed by the circuit breaker or fuse ratings shown below.

• 1-phase, 208-240V DC Wallbox variant: 2-pole, 125A circuit breaker or fuses

#### 3.2.3 Conduit for power input wires

Both variant of the DC Wallbox supports up to a 1-1/4" trade size conduit connection.

## 3.2.4 Specification for power input wires

The exact size and type of wires used must be defined by the customer and be protected by customer provided overcurrent protection according to local codes and regulations.

The input terminals for 1-phase UL variant of the DC Wallbox accept a range of wire sizes from 10 AWG to 0 AWG. Wire terminals are rated 75C.

The 1-phase UL variant DC Wallbox requires Two (2) phase wires and One (1) wire for protective earth. (2W+G)

All wires 1-phase variant of the DC Wallbox may connect directly to the ABB provided terminals.

The integrity of the electrical grounding is essential. Ensure that the equipment grounding terminal is used in the device and an actual grounding conductor is installed to provide a path back to the source upstream panel. (Do not use the conduit or raceway as the sole equipment grounding conductor).

2023-20-06 15/40

#### 3.2.5 Conduit for ethernet cable

The DC Wallbox does not have a hole designated for a conduit carrying only an ethernet cable to connect to. If ethernet cable solution is required for an installation, please contact your ABB sales contact person to review ethernet cable entry solutions.

## 3.2.6 Specification for ethernet cable

If the cellular connection is not available, ethernet connection must be made to the charger using a shielded 8P+PE ethernet cable with RJ45 connectors. Additional recommendations include:

- Maintain distance of 75 meters or less. Distances over 75 meters require a custom engineered solution.
- Minimum bandwidth: upload: 128 kb/s download: 4 Mb/s
- 99.9% availability
- 600V rated cable that may route beside input power wires for short distances

## 3.3 DC Wallbox placement


Placement of the Terra DC Wallbox must be carefully determined by accounting for charging cable reach, DC Wallbox position with respect to parking space, bollards and wheel stops, ventilation and working clearances, and other local codes and regulations (e.g. ADA requirements in the USA).

## 3.3.1 Charging cable reach

The Terra DC Wallbox charging cables are available in lengths of 3.5 or 7 meters. The charging cables exit the charger enclosure on both the right and left sides. The cables and the connectors mounted on the cables are different depending on the charging standard and vary in flexibility.


The figure below shows an example of a dual connector charger with both types of connector and the corresponding reach area. The green circle with a continuous line describes the CHAdeMO cable 3.5m and the red circle with a continuous line describes the CCS cable 3.5m. The broken lines indicate the same cable types with a length of 7 meters (23 ft).

2023-20-06 16/40

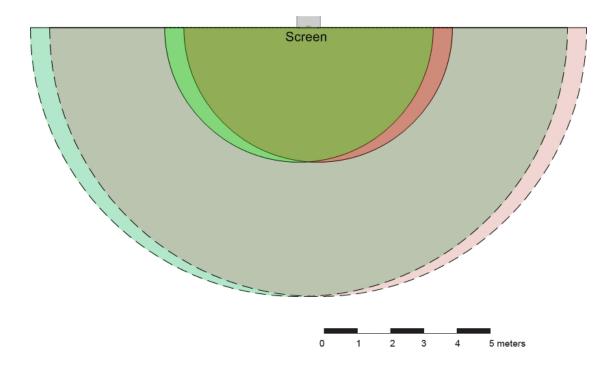

## 3.3.2 DC Wallbox position with respect to parking space


The charging inlets on a vehicle can be located at different positions depending on the manufacturer. The most common vehicles have inlets located either on the front or in the back on either the left or right side.

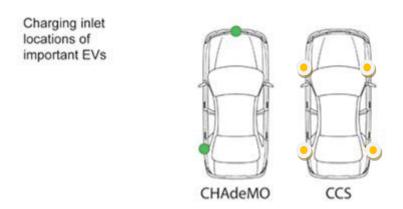


This makes some charger placements with respect to the parking space more favorable than others. Keep this in mind when designing a site. Below are examples of possible situations:

2023-20-06 17/40


Forward parking

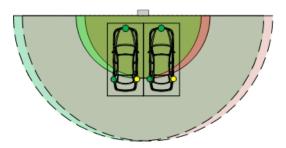


Lateral Backward parking

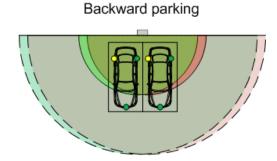

Lateral Forward parking

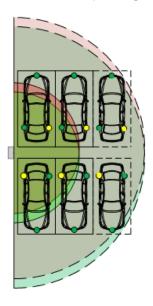

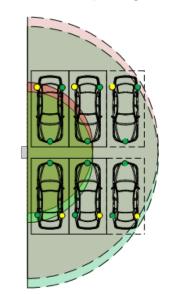


## 3.3.3 Required space for installing and maintaining the DC Wallbox

The Terra DC Wallbox requires a minimum space of 36" x 48". This space is calculated as follows:

- Charger size (H x W x D): 30.3 x 23 x 11.8 in
- Bottom side 23.6" (15.75" from the Terra DC Wallbox in order to avoid obstacles for the electrical connection).
- Left and right side 300mm/12", in order to operate without obstacles on the lateral side of the Terra DC Wallbox.

Note: The below dimensions are shown in millimeters.

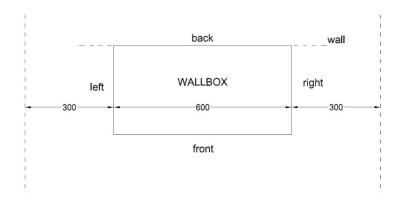

2023-20-06 18/40

### 3.3.4 Ventilation and airflow required for the DC Wallbox


The Terra DC Wallbox has an air inlet on the bottom side and an outlet on the top side.



NOTICE


Free air flow

If necessary, take precautions to prevent snow or objects from blocking the inlets and outlets.

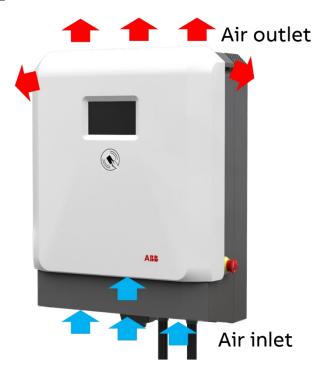

## 3.3.5 Considerations for where to position DC Wallbox vertically

The below picture shows the height of the operable parts and display screen from the top and bottom of the DC Wallbox's enclosure (not accounting for piece on enclosure where the customer conduits connect to). It is the installer's responsibility to use this information to define the height at which to install the DC Wallbox from the ground and to ensure compliance to local codes and regulations (e.g. ADA requirements in the USA).

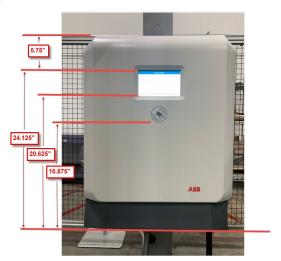

2023-20-06 19/40

## 4 Installation instructions

#### 4.1 About construction

The construction phase includes all work required to prepare the location and ensure it is ready for the placement and connection of the Terra DC Wallbox charger. The construction phase can start when:

- The wall preparation work is done.
- All necessary permits are granted.
- The grid connection is available.

## 4.2 Instruction for a wall bearing

- 1. Drill and tap 4 holes and insert the plug for fixation in the wall at the indicated positions (refer to technical drawing in the Appendix A par. 10.1). For safety purposes, the number of recommended fixing screws is 4xST7.3x70. This is assuming the appropriate type of wall plugs are used (depends on wall's characteristics, structure and type). It is the installer's responsibility to choose an appropriate wall plug and to plan for a load of 820 N on each plug.
- 2. When selecting the area along the wall for installation, ensure the required free spaces for the Terra DC Wallbox cables are available (refer to section 3.4).

### 4.2.1 Mounting on a pedestal

The Terra DC Wallbox can also be mounted on a pedestal. In order to achieve a safe installation, the minimum set of requirements are included in Appendix C – Pedestal requirements). For the ABB pedestal solution, contact your local ABB sales representative.

### 4.3 Power feed

The power cable enters the charger from below. Use conduit, foam, or proper cable lugs and glands to prevent animals from entering the AC or Ethernet cable inlets. (Reference Section 3.2 for feeder specifications)

### 4.4 Internet connection

The preferred method of communication is the wireless 4G modem integrated into the charger. A customer SIM card is not required. A subscription for the SIM card is provided by ABB for select countries.

If there is no wireless signal available, a standard wired internet connection is required. (Reference Section 3.1, 3.2.5 and 3.2.6 for wiring and connection methods)

- The connection must be available for the ABB service engineer and the NOC (Network Operation Center).
- Please contact ABB (800.825.2556 option 2) for a specific configuration.

If a separate internet connection is not used, please ensure the cable entry hole is closed to retain the IP54 grade of the cabinet and prevent insects and small animals from entering the cabinet.

2023-20-06 20/40

## 5 Receiving, Placing and connecting

## 5.1 Receiving the Wallbox

The product is delivered by a transport company to a warehouse where it will be handed over.

Transporting the Terra DC Wallbox to its final location (last mile service) is not included standard in the order.




NOTICE

The delivery truck unloads the pallet carrying the Terra DC Wallbox. The movement of the Terra DC Wallbox to its final location is the responsibility of the customer / contractor.

Ensure the Terra DC Wallbox has not been shaken or tilted.

• The cabinet is equipped with Shock Watch and Tilt Watch indicators.

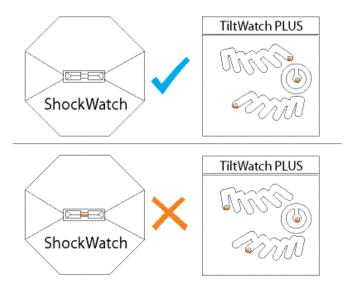

Checking the Shock Watch and Tilt Watch PLUS sensors:

If the Shock Watch indicator is red, or the Tilt Watch PLUS indicator is tilted over 30°:


- 1. Do not refuse the delivery / receipt.
- 2. Make a notation on the delivery receipt and inspect cabinet for damage.
- 3. If damage is discovered, leave cabinet in original package and request immediate inspection from carrier within 3 days of delivery.
- 4. Contact your local ABB office.

## 5.2 Unpacking the charging and mounting preparations

## 5.2.1 Unpacking

The packaging of the Terra DC Wallbox can be removed without the use of tools. Follow local regulations on disposal of packaging material.

2023-20-06 21/40

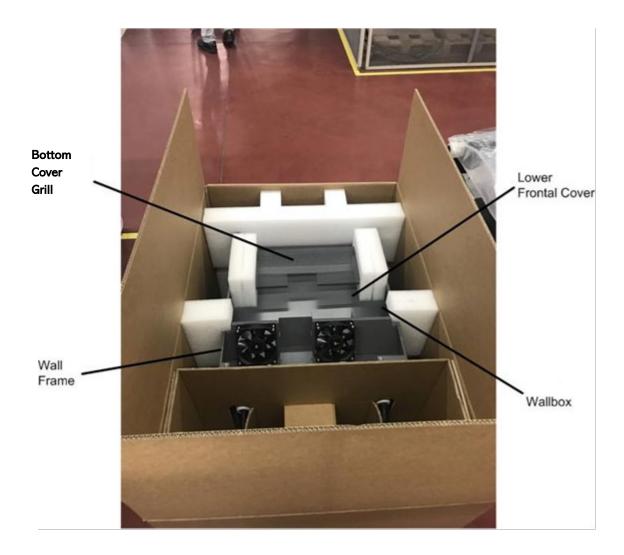

- 1. Remove the plastic protection profiles.
- 2. Remove the bottom air grate grill and the lower frontal cover.
- 3. Remove the wall frame.
- 4. Remove the Terra DC Wallbox. (USE CAUTION TO NOT DAMAGE THE E-STOP BUTTON ON THE SIDE OF THE ENCLOSURE)
- 5. Remove the AC ferrite core link to the outlet gun cable (assembly position shown at paragraph 5.4.2)
- 6. For all components above, remove the shrink wrap.

## **5.2.2** Mounting preparations

Unpack the IP BOX and verify all the following items are present:

- Wall frame
- Frontal cover
- Bottom grid cover

2023-20-06 22/40

## 5.3 Move cabinet to position

## 5.3.1 Options

A properly rated lifting devices should be used to move the Terra DC Wallbox from the delivery truck to the installation location.



DANGER Hazardous voltage

Ensure the product's power supply group main switch is set to the OFF position. Perform a voltage check to verify there is no electrical power on the cables or on the system. Secure the product from resetting.



NOTICE Warranty

Damage due to moving the cabinet to its position is not considered a warranty issue.

## 5.4 Mounting the Terra DC Wallbox

Preconditions:

- Tools: Spanner/Wrench size 17.
- Guide the power cable through the central cable gland, and the Ethernet cable if required, through
  the smaller gland. Install the power wiring in the conduit/raceway that is connected to the unit.
   See below image for a typical conduit install make ready for installation of the Wallbox.



## 5.4.1 Mounting the Terra DC Wallbox




#### NOTICE


The minimum number of people required to lift and install the Terra DC Wallbox must be determined based on the relevant local regulation with taking into account the maximum allowed weight per person as well as the usage of the appropriate and suitable lifting equipment. The definition of the exact lifting equipment and working method for lifting is the responsibility of the installation contractor.

2023-20-06 23/40

- 1. Carefully lower the Terra DC Wallbox onto its location.
- 2. Ensure cable(s) are not entrapped.
- 3. Place the wall frame in the correct position on the wall bearing by aligning the four holes of the charger with the corresponding holes on the wall bearing.
- 4. Tighten the four screws with stainless steel 8.8 hexagonal bolts.

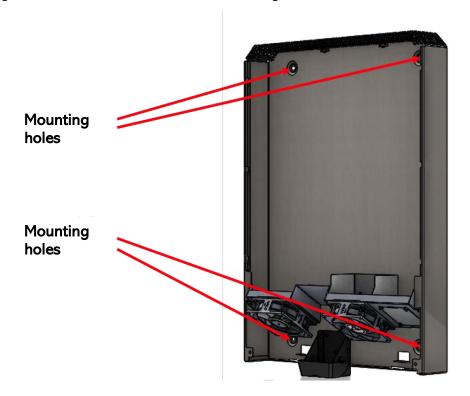

5. Place the unit on the wall frame by correctly aligning the 6 bolts (3 for each lateral side).

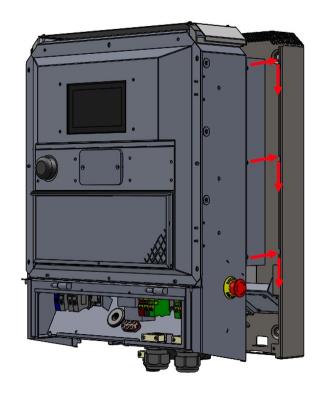

2023-20-06 24/40

6. Tighten the two M5 bolts on the lower side of the unit. Pay attention to the internal fan power supply cable. CAUTION: DO NOT SET SMALL OBJECTS ON TOP MESH COVER, ITEMS MAY FALL INTO THE COOLING FINS OR FAN COMPONENTS.




DETAIL
(BOTTOM VIEW)

M5 Bolts (2x)


M5 Bolts (2x)

- 7. Let the auxiliary power supply cable pass through the central gland and tighten it.
- 8. IMPORTANT, connect both of the cooling fans to their power connections before proceeding to close the covers. There are two connectors one for the left fan and one for the right fan.

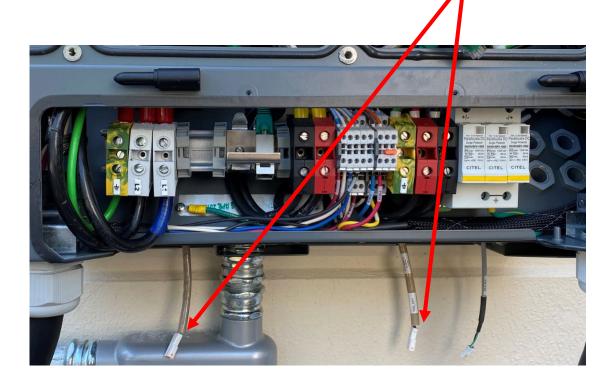


2023-20-06 25/40


9. AFTER the completing wiring terminations, take the bottom cover grill and put it on the lower side of the unit and fix it by tightening two screws as shown in the following picture. Please note the 3-phase and 1-phase versions have a slightly different bottom grill assembly

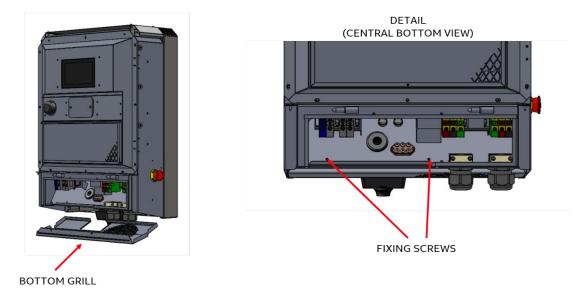

10. Take the lower frontal cover and place it on the lower side of the unit. Secure it in place by tightening the two screws.

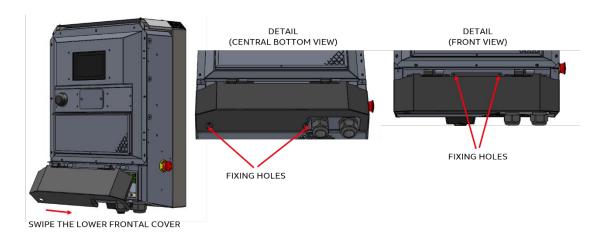

11. Center the holes on the plastic cover with the pins on the box.

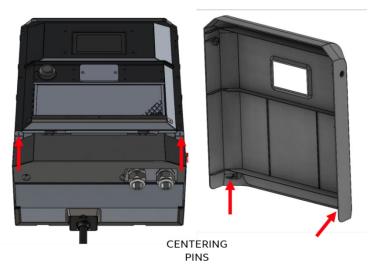

2023-20-06 26/40

12. Place the central cover on the unit and secure it in place by tightening the two screws located on the left and right side of the cover. Center the bottom pins, rotate the cover, and tighten the 2 lateral screws.




## 5.4.2 Install cable gland(s) or connect conduit to the unit.

The maximum diameter of the grid cable is 32 mm. The opening is pre-punched for a 1.25" trade size conduit. The minimum diameter of the grid cable is 22 mm with the standard fitted cable gland insert.




Conduit Install shown as a comparison

1. Slide the cable inside the grommets, ensure at least 10mm of cable external jacket inside the box (see notes at the end of this section, before sliding the cable inside the grommet. Allow at least 24 inches of wire from the conduit entry point to allow enough wire to route thru the internal grommet/cable glands and wrap around to the terminal blocks.

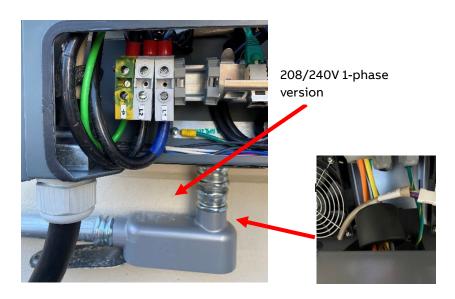

2023-20-06 27/40

2. Push the cables back through the gland plate, until sufficient cable length is left to reach the cable terminals. Ensure the PE cable is longer than the other cables.

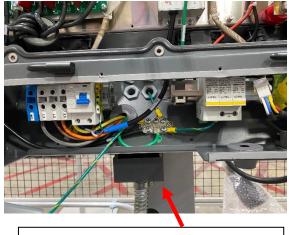



Conduit Installation 1.25" secured to bottom mounting area. 1-phase Version Shown


1-Phase Connection using flexible

3. Slide the cable cover and tighten the two screws.

If a wired internet connection is not used, please ensure the cable entry hole is closed, to assure the IP54 grade of the cabinet, and prevent insects and small animals to enter the cabinet.

NOTE 1: For 3-phase versions a ferrite core is provided with the Wallbox (plastic bag within the package or strapped to the CCS-1 cable) and needs to be installed in commissioning phase. The Ferrite needs to be inserted in the AC in cable and located in the screw cable cover (see picture above, left). THE FERRITE IS REQUIRED TO MAINTAIN THE WARRANTY.

NOTE 2: Two floating grounding cables are provided that are connected to the ground node. One cable must be connected between the to the wall frame PEM the other to the front lower cover in order to guarantee equal ground potential (see picture above, right).

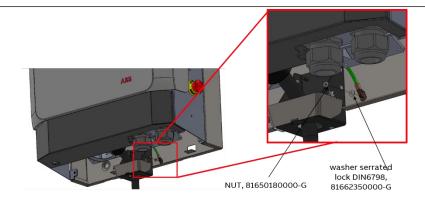

2023-20-06 28/40

## 5.5 Connect cables

## 5.5.1 Connect PE of power cable

#### Preconditions:

• Tools: Wire stripper pliers; wire-end lug pliers; wire-end lug.



DANGER

Hazardous voltage

Make sure that the main switch of the power supply group for the product is set to the OFF position. Perform a voltage check and make sure that the electrical power is disconnected from the system. Follow recommended *NFPA-70e* procedures.

1. Cut the PE wire of the power cable to the correct length (equal than the other phases) to reach the PE connector.



NOTICE

For safety, it is recommended that the PE wire is longer than the phase wires. This ensures the PE wire will be the last wire connected if the Terra DC Wallbox is moved by a collision.

- 2. Use wire stripper pliers to remove 0.75 in (20 mm) of the insulation from the end of the PE wire and attach the cable lugs.
- 3. Pull the cover away from the connectors and remove them.
- 4. Loosen the bolts of the PE connector
- 5. Attach the PE wire on the PE connector as indicated on the label on the relative terminal block
- 6. Tighten the bolts. The advised torque value is 2.9 Nm.

### 5.5.2 Connect power cable

#### Preconditions:

• Tools: Wire stripper pliers; wire-end lug pliers; wire-end lugs.



DANGER


Hazardous voltage

Ensure the product's power supply group's main switch is set to the OFF position. Perform a voltage check and ensure the electrical power is disconnected from the system.

- 7. Cut the 2 phase wires of the power cable to the correct lengths to reach the connectors.
- 8. Use wire stripper pliers to remove 0.75 in (20 mm) of the insulation from the ends of the wires insert and attach the cable lugs
- 9. Pull the covers away from the connectors and remove them.
- 10. Loosen the bolts of the connectors.
- 11. Attach the 2 wires on to their connectors as indicated on the label on the relative terminal block (see the following picture as example).

2023-20-06 29/40

From left to right for the 1-phase unit (as showed in the following picture):
 PE- terminal block green/yellow, L2 - terminal block grey, L1 - terminal block grey

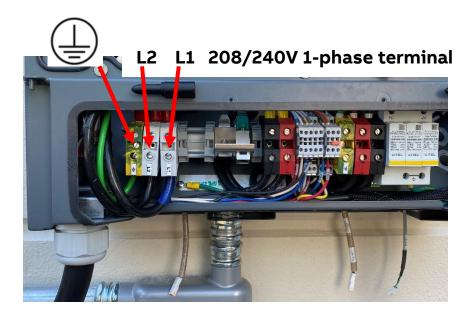

- 12. Tighten the bolts. The advised torque value is 2.9Nm.
- 13. After terminating the wires, make sure to adjust the terminal blocks so they are properly aligned as misalignment can occur while applying proper torque to the connectors (as shown in 208/240V terminal layout above)

## 5.6 Instruction for Mounting the DC Wallbox Gun Holders

#### 5.6.1 General

This document is intended to provide an instruction for service team / installers in order to be able to properly install the terra DC wallbox gun holders.

## 5.6.2 General description

The Terra DC wallbox is provided with two types of gun holders. A standard gun holder is provided with all the DC wallboxes. The standard Terra DC wallbox gun holder is illustrated in Fig.1 and 2Error! Reference source not found. An optional gun holder is also available as an optional / spare part and can be ordered as external kit. The optional gun holder is illustrated in Fig. 3 and 4. All the above described gun holders include adapters for CCS or Chademo charging guns.

2023-20-06 30/40

## 5.6.3 Mounting instructions

The gun holders described above are intended for a very simple installation. Standard gun holder is provided with 3 holes for wall hooking while optional one is provided with a wall mounted hooking bar (10 in Fig.3) to be mounted to wall. The recommended dowels to be used are of 10 size for both cases.



Figure 1: Series production Terra DC wallbox gun holder (Chademo model).



Figure 2: Series production Terra
DC wallbox gun holder
(CCS model).


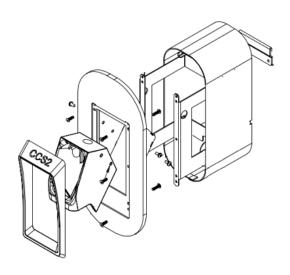


Figure 3: Terra DC wallbox optional gun holder.



Figure 4: Terra DC wallbox optional Gun holder; front and side view.

2023-20-06 31/40

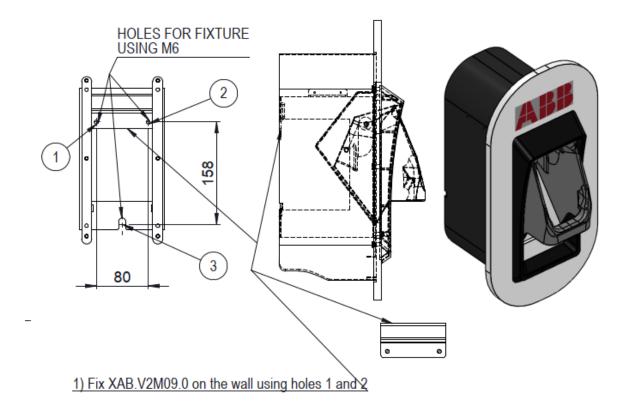

- 2) Fix the system on the bracket (XAP.V2M09.0)
- 3) Fix Screw on hole number 3

2023-20-06 32/40

## 6 Commissioning

## 6.1 Commissioning preparation

Commissioning is the last phase necessary to get the Terra DC Wallbox operational. The purpose is to check the safe functioning of the charger for its operational purpose.

A certified service engineer from the ABB Service department or a trained engineer by ABB is required to perform the commissioning. During this commissioning, the safety and the functioning of the charger will be tested. ABB Form Titled "SI-TWBCE-001 UL CSAT Procedure DC Wallbox", (Charger System Acceptance Test) should be used for the commissioning process as it contains the checklist and contact information for activation of the charger warranty.

Before the service engineer can start, the following conditions must be met:

- All work described in Preparation, Construction and Placement and connection is complete with Power available.
- A local technician is present for assistance and to switch on the power.
- Internet access must be available in case 4G is not functional.
- A Combo compliant electric vehicle must be available for testing CCS charging.
- A CHAdeMO compliant electric vehicle must be available for testing the CHAdeMO charging.
- Any electric vehicle for instructing the site operator.



#### NOTICE

Warranty: It is not allowed to move the Terra DC Wallbox, after it is commissioned. In case the Terra DC Wallbox is moved without approval from ABB, the warranty will be considered void. In case of relocation please contact the local ABB Service department.

Commissioning is executed according to the CSAT checklist, this check list can be found in the Helios Suite Service tool that is available to the certified commissioning engineers or their supervising ABB organization. The following data is required for input:

- End-user Contact person (Create a contact if it doesn't exist).
- Charger address (Check the site address, it will be the address the charger was shipped to).
- Coordinates longitude and latitude for plots on the maps. If there are more chargers on 1 location, make sure the coordinates are slightly different (at least 0,0001 degrees) to prevent being displayed on the same location.
- Site name if this is useful for better recognition (example: Shell petrol station Amsterdam).
- External fuse of the charger.
- SAT (Site Acceptance Test) date.

Location remarks (any special remarks about the site, e.g. behind a gate, no photo cameras allowed etc.). Add a picture of the surrounding of the charger, upload the local CAF document A4 on the page of the charger in PDF. Change Deliver status to <SAT>.

After completing the Site Acceptance Test, ABB's Network Operation Center will be triggered to perform a final check on the connection and configuration of the charger.

Upon approval the charger will be operational and initialized for use.

2023-20-06 33/40

## 7 Maintenance and Cleaning of the cabinet

## 7.1 Recommended Periodic maintenance

- A. Following *NFPA-70e* procedures, de-energize unit, open cover, inspect air filter, clean or replace as needed.
- B. Check input connections and terminations for proper toque values
- C. Check Grounding resistance
- D. Exercise input breaker and output DC breakers
- E. Open HMI cover, inspect capacitors and fuse connections.
- F. Clean interior with a HEPA vacuum.
- G. Blow out rear cooling fins and remove any debris
- H. Reassemble unit, energize verify input voltage, perform a charging session.
- I. Using the connected network verify charging session details.

## 7.2 Cleaning of the cabinet

The Terra DC Wallbox Charger is powder coated. This coating must be kept in good condition.

Clean the Terra DC Wallbox Charger three times a year in the following way:

- Remove rough dirt by spraying with low-pressure tap water.
- Apply a neutral or weak alkaline cleaning solution and let it soak.
- Remove dirt by hand with a non-woven nylon hand pad.
- Rinse thoroughly with tap water.
- Do a check on the coating and on the front cover for damage.



### NOTICE

When the Terra DC Wallbox Charger is exposed to rain, it is sufficient to clean it twice a year.



### CAUTION

Do not apply high-pressure water jets. Water may leak into the Terra DC Wallbox Charger. If a high-pressure water jet has been used, ensure the inside of the Terra DC Wallbox Charger is dry.

- Only use cleaning agents with a pH value between 6 and 8.
- Do not use cleaning agents with abrasive components.
- Do not use abrasive tools.

2023-20-06 34/40

## 8 Technical Data

## 8.1 Electrical data

AC Input	
AC input voltage range	208 - 240 V <sub>AC</sub> +/- 10% (60Hz)
AC input power connection	1-phase, 208-240 V <sub>AC</sub> : L1, L2, GND
Maximum rated input current at nominal voltage	100 A
Recommended upstream overcurrent protection device rating	125 A
Power factor	> 0.96
Efficiency	94% at nominal output power
DC output	
Maximum DC output power	19.5 kW @ 208 V 22.5 kW @240 V
DC output voltage range	CCS1: 150 - 920 VDC CHAdeMO: 150 – 500 VDC
Maximum DC output current	60 ADC

## (1) Single phase configuration

General	
DC connection standard	EN61851-23 / DIN 70121 CCS 2 CHAdeMO 1.0
DC cable length	3.5 meters or 7 meters (12 feet or 23 feet)
DC plug type	CCS 1 / CHAdeMO
RFID data	ISO/IEC14443A/B, ISO/IEC15693, NFC reader mode, Mifare, Calypso
RFID system	FeliCa™1, NFC reader mode
Network connection	GSM / 4G modem 10/100 Base-T Ethernet

2023-20-06 35/40

## 8.2 Mechanical data

Mechanical data	
Dimensions (H x W x D)	770 mm x 585 mm x 300 mm / 30.32" x 23.03" x 11.81"
Weight	70 kg / 154.32lbs
Volume	0,135 m3
Dimensions including packaging (H X W x D)	650 mm x 1200 mm x 800 mm /25.6" x 47.25" x 31.5"
Weight including packaging	80 kg / 176.37 lbs.
Mechanical impact protection	IK10

## 8.3 Environment

Environmental data		
Ingression protection	IP54, NEMA 3S; indoor and outdoor	
Temperature range – Operation	-35°C to + 55°C /-31F to + 131F	
Temperature range - Storage	(derating applies between 45°C and 55°C / 113F-131F)  -40 °C to +70 °C / -40F to +158F	
Humidity	20% - 95% RH - non-condensing	
Operational noise level	55 dBA @25°C	
Altitude	2500 m max.	

## 8.4 Certifications

EMC: EN 61000-6-4 Class A emission; EN 61000-6-3 Class B emission; EN 61000-6-2 immunity.

LVD: IEC 61851-23, IEC 61851-1, IEC 62196

**RFID:** ETSI EN 300 330

• UL 2202

• CSA STD C22.2 No. 107.1

FCC Part 15 Class A

2023-20-06 36/40

## 9 Contact information



NOTICE

In case of problems

Please contact your local ABB Service organization or Service partner for first line problem analysis and solving. In case they cannot solve the problem, they will contact the second line Service organization.

ABB in your country

Please contact ABB in your country for sales, delivery and service information.

## ABB EV Infrastructure USA

ABB Inc.

950 E Elliott Rd

Tempe, AZ 85284 Suite 100

**United States** 

Phone: 800-435-7365

E-mail: US-evci@us.abb.com

## ABB EV Infrastructure Canada

ABB Inc.

800 Hymus Boulevard

Saint-Laurent, QC H4S 0B5

Canada

Phone: 800-435-7365

E-mail: CA-evci@abb.com

## ABB EV Infrastructure Global

Address Heertjeslaan 6

2629 JG, Delft The Netherlands


Telephone +31 70 307 62 00

Mail info.evi@nl.abb.com

2023-20-06 37/40

## 10 Appendix A – Mounting points

## 10.1 Terra DC Wallbox Charger wall mounting

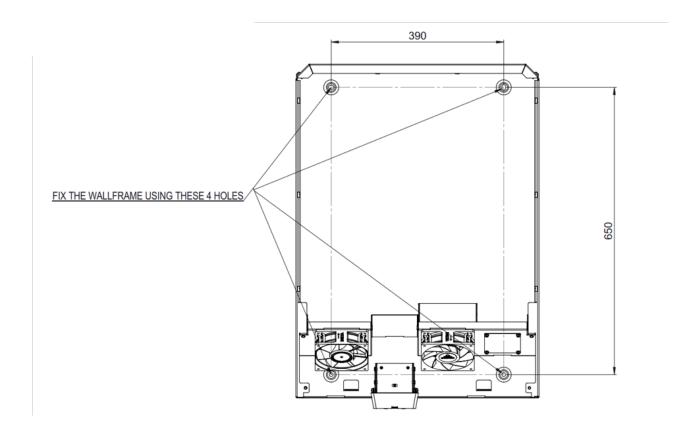

2023-20-06 38/40

#### **Appendix B - Disposal instruction** 11

## Directive on Waste Electrical and Electronic Equipment (WEEE -11.1

# 2012/19/EU) **ABB** ENGLISH ESPAÑOL DANSK FRANCAIS NEDERLASNDS SVENSKA SLOVENŠČINA ČESKY Ø Z

Z

2023-20-06

## 12 Appendix C – Pedestal requirements

Any pedestal solution designed for Terra DC Wallbox needs to fulfill the specific ISO standards for civil constructions (note: specific local regulations may apply).

Additionally, whereas no specific constraint is provided by local regulations, the minimum set of requirements necessary to provide a safe installation are listed in the table below to be verified in the temperature range between  $-50^{\circ}\text{C} - +60^{\circ}\text{C}$ :

Minimum Wind load resistance	100km/h
Minimum compression load capability (applied on center of mass of the WB)	4kN
Side / Back / frontal impact MAX (applied on the pedestal/WB) higher point	3kN
Pulling /Pushing force applied (to gun holders if they are mechanically connected to same structure and external to the WB area)	3kN
Min / Max distance of gun holder from WB (if mechanically connected to pedestal structure)	300mm / 1000mm
Rust protection paint	Yes
Minimum clearance areas side / top / bottom around the charger	300mm
Recommended foundation requirements (min tilting torque)	To be designed considering the max loads in each direction
Vibration test required on the full system	According to procedure described in IEC 60068-2-27: 2008 and IEC 60068-2-6: 2007
Electrical ground connection	To the chassis of the DCWB

2023-20-06 40/40