

AUTEL®


MAXI**CHARGER** DCCOMPACT

40kW



MAXICHARGER DCCOMPACT

BIG POWER AND BIG VALUE IN A COMPACT PACKAGE

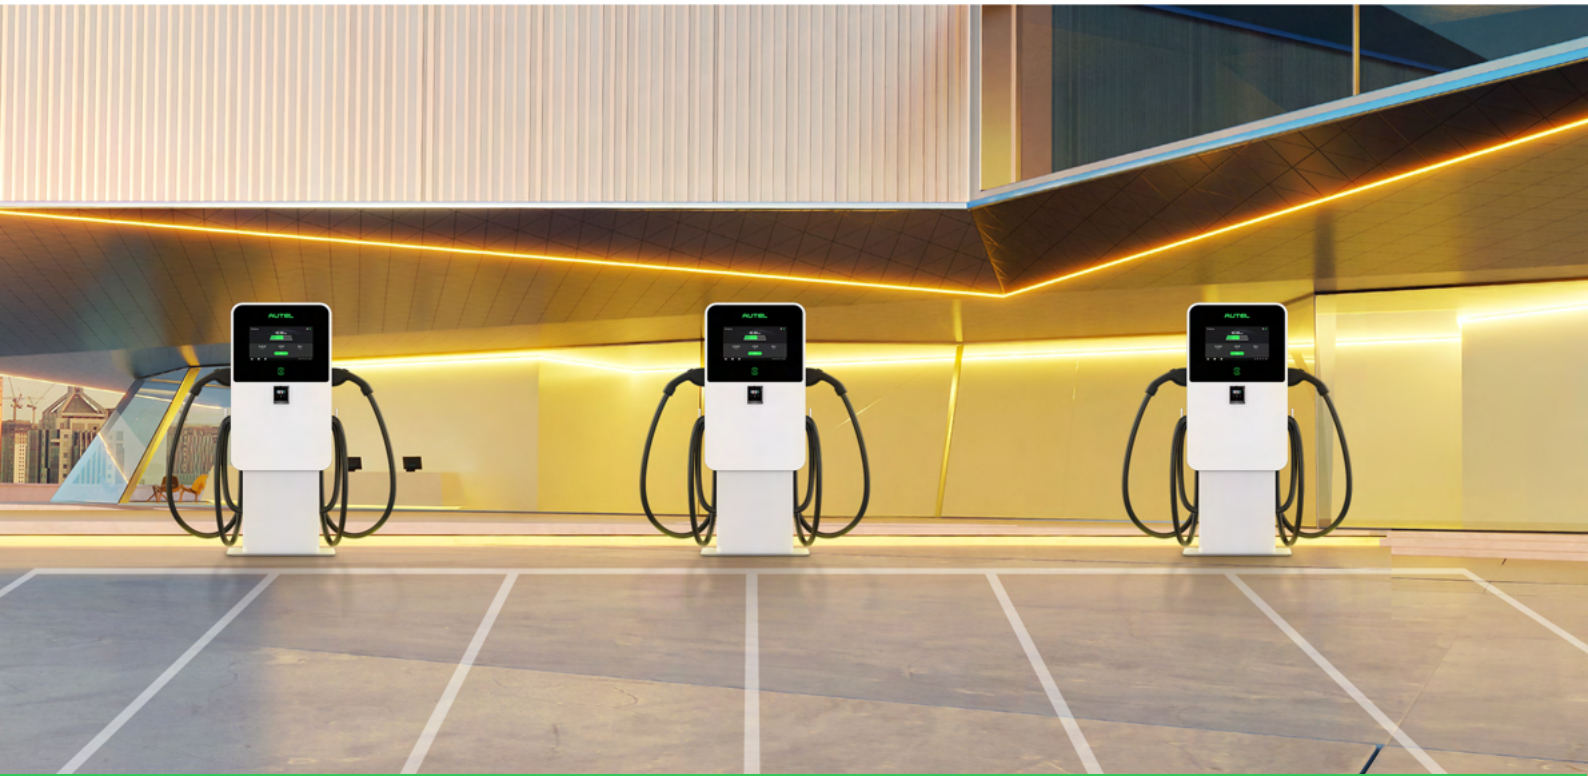

FAST AND EFFECTIVE

BUILT TO INCREASE CHARGING EFFICIENCY

- Dual-ports provide up to 40kW of power
- Charge 2 vehicles simultaneously
- A 30 min charge equates to 80+ miles of range



COMPACT DESIGN

OPTIMIZED FOR ANY LOCATION

- Ultra-compact with big DC power in a small package
- DC Compact has low installation costs, meaning a faster ROI due to reduced capital expenditures for the site operator



SMART ADVERTISING AND COMMUNICATION PORTAL

IMPROVE YOUR ROI

- User-friendly 21.5-inch LCD touch screen
- Powered by smart operating system, Android 10 with enhanced advertising placement
- Communicate, promote or attract customers generating new revenue streams

A CLOSER LOOK AT MAXICHARGER DCCOMPACT



OCPP1.6/2.0.1



One Stop Cloud
Network Management



96% Charging Efficiency



Certified Through a 16-point
Inspection Process



ISO 15118 Plug & Charge



Smart Charging



Compatible with CCS1,
CCS2, CHAdeMO



Support APP, RFID Card,
Credit Card, Mobile Payment



Weather Resistant

TECHNICAL SPECIFICATIONS

DC OUTPUT CONNECTION

Charging mode	Mode 4: CCS1
Output power	40kW
Output voltage	150-950V
Max output current	133A
Number of outputs	2*CCS1, or 1*CCS1+1*CHAdeMO, or 1*CCS1
Peak efficiency	≥96%

AC INPUT CONNECTION

Earthing system	3P, PE (No neutral)
Input voltage	3-phase 480V AC+10%~-15%
Input frequency	60Hz
Power factor	≥0.99
Harmonic distortion (THDi)	≤5%

GENERAL CHARACTERISTICS

Enclosure Rating	NEMA 3S
Operating altitude	2000m
Operating temperature range	-30°C~+55°C
Storage temperature range	-40°C~+70°C
Mounting	Wall or floor using a pedestal
Dimensions (H*W*D)	1000×550×260 mm

USER INTERFACE

Screen type	21.5 inch LCD Touch Screen
Cable length	4m Standard; 5m Optional
Status indication	LED/LCD/APP
User interface	Autel Charge APP; Autel Charge Cloud
Connectivity	4G, Wi-Fi, Ethernet
Communication protocols	OCPP 1.6J (Can be upgraded to OCPP 2.0.1 later)
User authentication	APP, RFID card, Credit Card (Optional)

SOFTWARE UPDATE

OTA updates via web portal

CERTIFICATION AND STANDARDS

Safety and compliance	UL 2202, UL 2231-1, UL 2231-2, CSA No.107.1-16, NEC Article 625, ISO 15118 Plug&Charge
EMC compliance	FCC 15 Class A
Warranty	24 months, warranty extension possible

AUTEL[®]

Autel Intelligent Technology Corp., Ltd

☎ Phone: (844) 765-0150

✉ E-mail: evsupport@autel.com

🌐 Website: autelenergy.com

Autel Energy





Installation and Operation Manual

MaxiCharger DC Compact (UL)

Trademarks

Autel® and MaxiCharger® are trademarks of Autel Intelligent Technology Corp., Ltd., registered in China, the United States and other countries. All other marks are trademarks or registered trademarks of their respective holders.

Copyright Information

No part of this manual may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise without the prior written permission of Autel.

Disclaimer of Warranties and Limitation of Liabilities

All information, specifications, and illustrations in this manual are based on the latest information available at the time of printing. Autel reserves the right to make changes at any time without notice. While information in this manual has been carefully checked for accuracy, no guarantee is given for the completeness and correctness of the contents, including but not limited to the product specifications, functions, and illustrations.

Autel will not be liable for any direct damages or for any special, incidental, or indirect damages or for any economic consequential damages (including the loss of profits).

For Services and Support (24/7):

Web: www.autelenergy.com

Tel: (844) 765-0150

Email: evsupport@autel.com

Address: 36 Harbor Park Drive, Port Washington, New York, USA 11050

For technical assistance in all other markets, please contact your local distributor.

CONTENTS

1. USING THIS MANUAL	1
1.1 CONVENTIONS	1
1.1.1 <i>Bold Text</i>	1
1.1.2 <i>Illustrations</i>	1
1.1.3 <i>Notes and Important Messages</i>	1
1.1.4 <i>Procedures</i>	1
1.1.5 <i>Revision History</i>	1
1.2 TERMINOLOGY	2
2. SAFETY	3
2.1 SAFETY	3
2.2 OWNER RESPONSIBILITIES	3
2.3 INSTALLATION ENGINEER QUALIFICATIONS.....	4
2.4 USAGE INSTRUCTIONS.....	4
2.5 SIGNS ON THE MAXICHARGER	4
2.6 DISPOSAL INSTRUCTIONS	4
3. GENERAL INTRODUCTION	5
3.1 PRODUCT OVERVIEW (INSIDE).....	5
3.2 PRODUCT OVERVIEW (OUTSIDE)	6
4. PREPARATION	7
4.1 BEFORE YOU BEGIN	7
4.2 LOCATION REQUIREMENTS	7
4.3 INSTALLATION TOOLS AND MATERIALS	8
4.3.1 <i>In the Box</i>	8
4.3.2 <i>Recommended Tools</i>	11
5. INSTALLATION	12
5.1 UNPACK.....	13
5.2 MOVE THE MAXICHARGER	13
5.3 MOUNT THE EQUIPMENT	14
5.3.1 <i>Mount on a Pedestal</i>	14
5.3.2 <i>Mount the MaxiCharger with Pedestal</i>	17
5.3.3 <i>Mount on a Trolley</i>	18
5.4 POWER SUPPLY WIRING	19
5.4.1 <i>Open the Cabinet Door</i>	19
5.4.2 <i>Connect the AC Input Cable</i>	20
5.5 INTERNET CONNECTION	22
5.5.1 <i>Connect the Ethernet Cable</i>	22
5.5.2 <i>Install the SIM Card</i>	22

5.6	FINISH INSTALLATION.....	23
5.7	UPSTREAM PROTECTIVE DEVICE	25
5.8	PREPARE FOR OPERATION	25
5.9	OCPP SETTINGS.....	26
5.10	AUTEL CHARGE CLOUD CONFIGURATION	28
6.	OPERATION	29
6.1	CHARGE SESSIONS	29
6.1.1	<i>Standby Mode</i>	29
6.1.2	<i>Authorization</i>	30
6.1.3	<i>Start Charging</i>	30
6.1.4	<i>Charging</i>	31
6.1.5	<i>Stop Charging</i>	31
6.1.6	<i>Finish Charging</i>	31
6.2	CHARGING ERRORS	32
6.2.1	<i>Connector Connection Error</i>	32
6.2.2	<i>Authorization Failure</i>	32
6.2.3	<i>Charge Start Failure</i>	32
6.2.4	<i>Charging Failure</i>	32
6.3	DE-ENERGIZE THE MAXICHARGER	32
6.3.1	<i>Measuring the AC Voltage</i>	32
6.3.2	<i>Measuring the DC Voltage</i>	33
7.	MAINTENANCE	34
7.1	ROUTINE MAINTENANCE.....	34
7.1.1	<i>Cleaning the Cabinet</i>	34
7.1.2	<i>Residual Current Device Maintenance</i>	35
7.1.3	<i>Cleaning and Replacing the Air Filter</i>	35
7.1.4	<i>Fuse Inspection</i>	36
7.2	INSPECTION AND MAINTENANCE.....	36
7.3	REMOTE MAINTENANCE	37
7.4	MAINTENANCE SCHEDULE	37
8.	TROUBLESHOOTING	38
9.	SPECIFICATIONS.....	40
9.1	SPECIFICATIONS.....	40
9.2	INSTALLATION SPECIFICATIONS	42
9.3	PRODUCT DIMENSIONS.....	44

1. Using This Manual

This manual describes the installation and use of the MaxiCharger DC Compact. Prior to installation, read through this manual to become familiar with the instructions of this MaxiCharger to ensure a successful installation and smooth operations.

1.1 Conventions

The following conventions are used.

1.1.1 Bold Text

Bold text is used to highlight selectable items such as buttons and menu options.

1.1.2 Illustrations

Illustrations used in this manual are only examples; the actual product(s) or screens may vary.

1.1.3 Notes and Important Messages

Note

A NOTE provides helpful information such as additional explanations, tips, and comments.

Important

Indicates a situation which, if not avoided, may result in damage to the test equipment or vehicle.

1.1.4 Procedures

An arrow icon indicates a procedure.

➤ To charge an EV

1. Park an EV with the charging port within reach of the connector.
2. Plug in the vehicle. Avoid any extensive stretch of the charging cable.
3. Start the charge session.
4. Stop the charge session.

1.1.5 Revision History

Version	Date	Descriptions
V1	2023.05.12	Initial version
V2	2023.07.14	Product structure update

1.2 Terminology

Term	Definition
AC	Alternating current
CCS	Combined Charging System, a standard charging method for electric vehicles
CCU	Communication Control Unit, a control unit used to communicate with the BMS (Battery Management System) and control the power delivery to the EV
CHAdeMO	Abbreviation of CHARge de MOve, a standard charging method for electric vehicles
DC	Direct current
EV	Electric vehicle
OCPP	Open charge point protocol, open standard for communication with charge stations
RCCB	Residual current circuit breaker
RCD	Residual current device, a device that breaks an electrical circuit when it detects a current leakage
RFID	Radio-frequency identification, a method of charging authentication
SPD	Surge protection device, a device intended to protect electrical devices from voltage spikes in AC circuits
TCU	Transaction Control Unit, intelligent hardware to handle the human-machine interface, metering, transaction, and communication with back office

2. Safety

2.1 Safety

The safety messages herein cover situations of which Autel is aware. Autel cannot know, evaluate or advise you as to all of the possible hazards. You must be certain that any condition or service procedure encountered does not jeopardize your personal safety.

 **DANGER**

Indicates an imminently hazardous situation with a high risk level which, if the danger is not avoided, will cause death or serious injury.

 **WARNING**

Indicates a potentially hazardous situation with moderate risk level which, if the warning is not obeyed, can cause death or serious injury.

 **CAUTION**

Indicates a potentially hazardous situation with a medium risk level which, if the caution is not obeyed, may cause minor or moderate injury or damage to the equipment.

- Preview the standard operating procedures and ensure that local building and electrical codes are reviewed before installing the MaxiCharger.
- Read the manual before installing or using the MaxiCharger.
- Do not use the MaxiCharger if the cabinet, power cord or charging cable are frayed, have broken insulation or shows any other signs of damage.
- Do not install or use the MaxiCharger if the enclosure is broken, cracked, open, or has any other indication of damage.
- The information provided in this manual in no way exempts the user of responsibility to follow all applicable codes or safety standards.
- This document provides instructions for the MaxiCharger and should not be used for any other product. Before installation or use of this equipment, review this manual carefully and consult with a licensed contractor, licensed electrician or trained installation expert to ensure compliance with local building codes and safety standards.

2.2 Owner Responsibilities

The owner runs the MaxiCharger for commercial or business use or has authorized a third party to use it. The owner should protect the user, other employees or third parties when the MaxiCharger is in use. The owner bears the responsibilities as follows:

- Know and obey the local codes and ordinances.
- Ensure all employees and third parties are qualified to operate the MaxiCharger.
- Ensure the MaxiCharger has installed the protective devices.
- Ensure all the protective devices are installed after installation or maintenance.
- Ensure the space around the MaxiCharger is sufficient to carry out installation or maintenance work.

- Ensure there is a plan in place in case of an emergency.
- Ensure there are no safety hazards on the site.
- Have a site operator available who undertakes the safe operation of the MaxiCharger and all the coordination of work if the owner takes no part in the work.
- Ensure the installation engineer follows the local codes and ordinances, the installation instructions, as well as the specifications of the MaxiCharger.

2.3 Installation Engineer Qualifications





- Fully understands the equipment and its safe installation procedures.
- Qualified according to local regulations to carry out the installation work.
- Able to follow all the local regulations and this manual to complete the installation of the MaxiCharger.

2.4 Usage Instructions

Do not operate the MaxiCharger and immediately contact the manufacturer if any of the following situation arises:

- Damage on the enclosure, charging cable or connector
- Lightning has struck the MaxiCharger
- Fire or flames at or near the MaxiCharger
- Any sign of water damage on the MaxiCharger

2.5 Signs on the MaxiCharger

Symbol	Risk Description
	General risk
	Hazardous voltage that gives risk of electrocution
	Waste from electrical and electronic equipment
	Hot surface that gives risk of burn injuries

2.6 Disposal Instructions

Potential hazardous substances of the MaxiCharger can have a negative impact on the environment and human health if the waste is not handled properly. Dispose any waste as needed to protect the environment and promote the reuse and recycling of the materials.

3. General Introduction

The MaxiCharger DC Compact offers the best value with 40kW smart charging power, advertising, and communication capability in a perfect size to fit almost any application.

Intended Use

This MaxiCharger is intended for the DC charging of EVs. It is intended for both indoor and outdoor use.


- Fleet
- Highway
- Commercial Parking
- Others

DANGER

- The equipment must be operated as described in this manual or other related documents released by Autel. Failure to comply may result in human injury and/or damage to the property.
- Use the equipment only as intended.



3.1 Product Overview (Inside)

- A Equipment Control Unit (ECU)
- B Communication Control Unit 1 (CCU1)
- C Power Hub
- D Surge Protection Device (SPD)
- E AC Contactor 1
- F AC Contactor 2
- G Residual Current Circuit Breaker (RCCB)
- H Communication Control Unit 2 (CCU2)
- I Energy Meter 1
- J Energy Meter 2
- K 48 V Auxiliary Power
- L 24 V Auxiliary Power

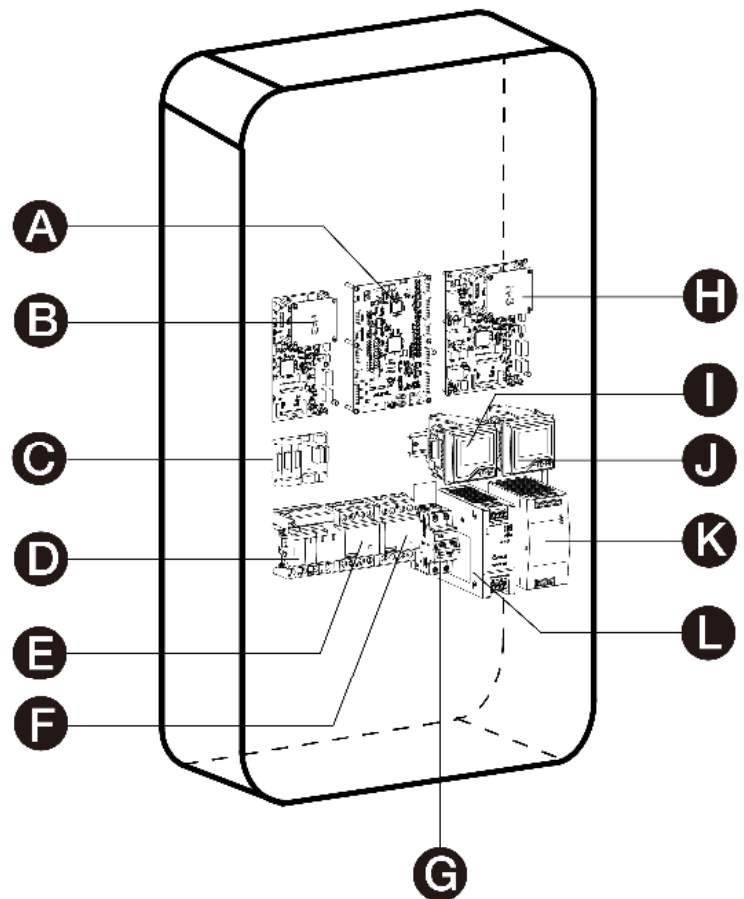

3.2 Product Overview (Outside)

1. Ambient Light Sensor — detects ambient brightness
2. 21.5-inch LCD Touchscreen
3. RFID Reader
4. POS Device (Optional)
5. Charging Cable
6. Ethernet Cable Inlet Hole
7. AC Inlet Hole
8. Lock
9. Vent — each on the right and left side
10. Groove
11. Lifting Handle
12. Inlet Air Filter Bezel

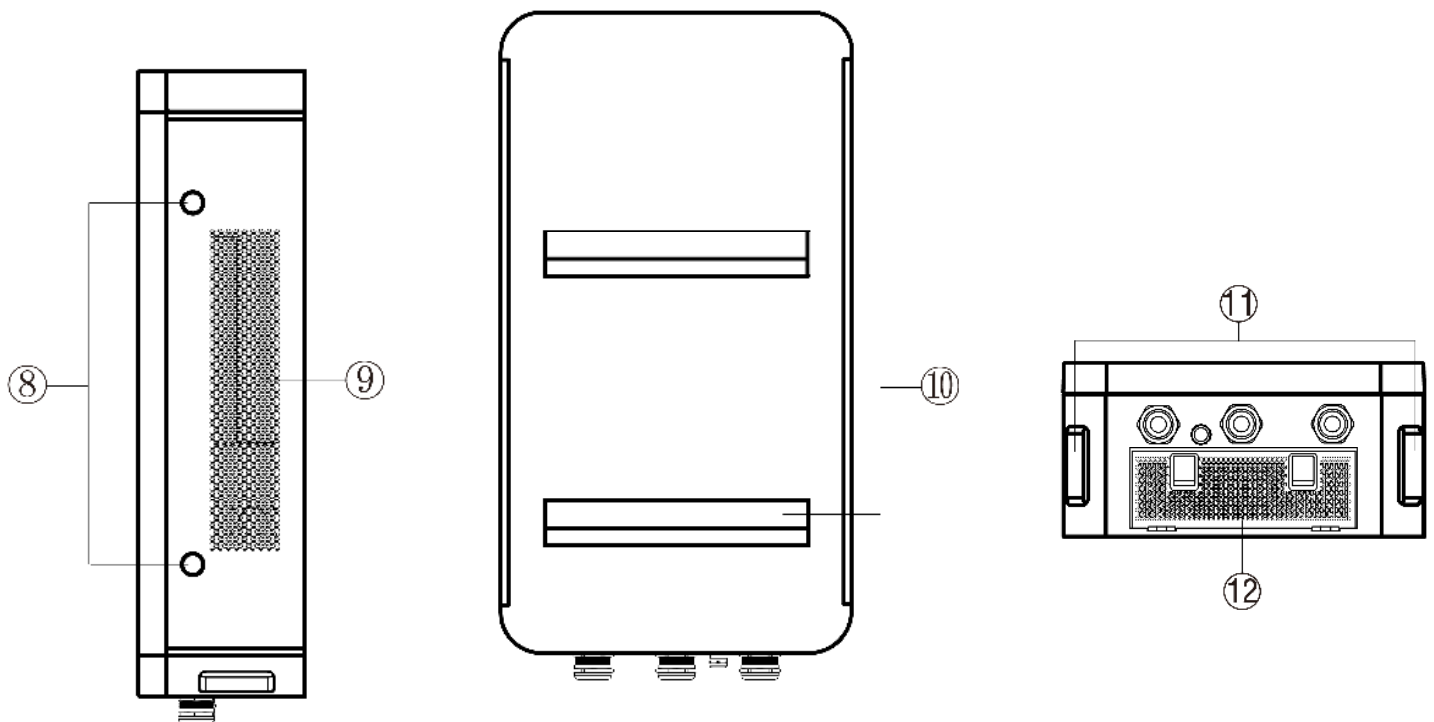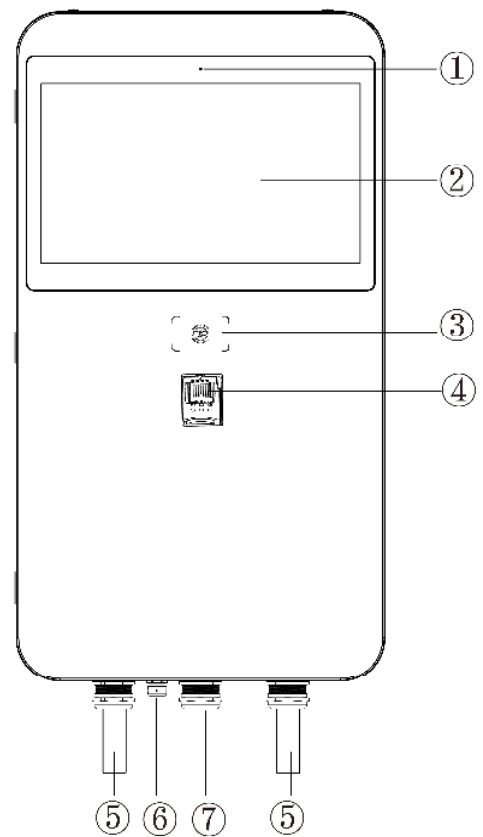

4. Preparation


4.1 Before You Begin

- Read through this manual prior to installation to be familiarized with the installation steps.
- Ensure the appropriate wiring, circuit protection, and metering is in place at the installation site, according to the specifications, wiring diagrams, and grounding requirements.
- Ensure the MaxiCharger is connected to a grounded, metal, permanent wiring system. Otherwise, an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment grounding terminal or lead on the product.
- Ensure the installation site has a load capacity sufficient to support the MaxiCharger.
- Ensure adequate CDMA (Verizon or Sprint) or GSM (AT&T, Rogers) cellular coverage is available at the installation site. Cellular repeaters may be required in underground garages or other enclosed parking structures.
- Ensure the space around the MaxiCharger is sufficient to carry out installation or maintenance work.

4.2 Location Requirements

Before mounting the MaxiCharger, choose a suitable mounting location that meets the following requirements:

- Ensure the charging connector of the MaxiCharger can sufficiently reach the vehicle's charging port with the chosen cable length. The standard charging cable length is 18 feet (5.5 m), and a 24.6 feet (7.5 m) cable is also available.
- Ensure that there is sufficient space to install the MaxiCharger. For the pedestal-mounting models, refer to the pedestal's drilling template dimensions described below:

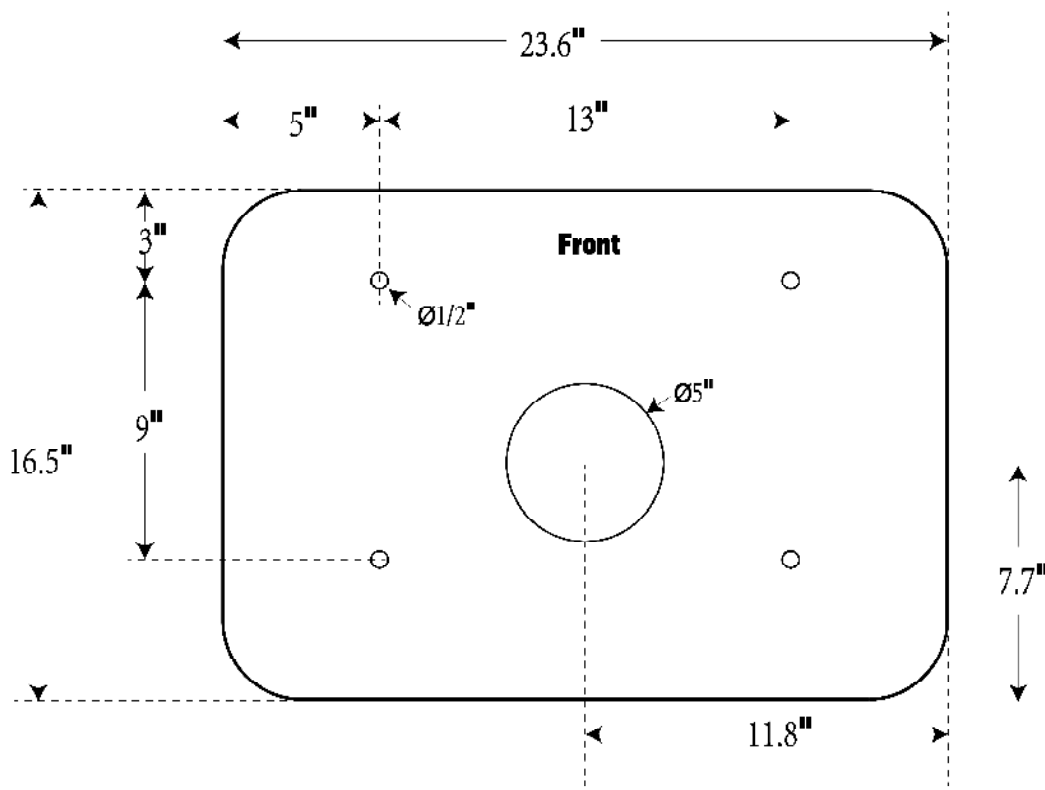

4.3 Installation Tools and Materials

The MaxiCharger DC Compact includes the following installation options:

- Floor-standing using a pedestal
- Trolley-mounting
- MaxiCharger with pedestal
- MaxiCharger with trolley

NOTE

- “MaxiCharger with pedestal” and “MaxiCharger with trolley” indicate that the MaxiCharger has already been installed on a pedestal or trolley before shipment.
- No mechanical and electrical installation are required for the “MaxiCharger with trolley” model.


Refer to the corresponding list in accordance with the order.

4.3.1 In the Box

For floor-standing installation:


MaxiCharger

1 PC

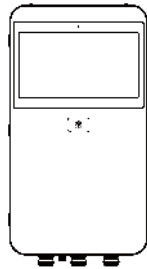

Pedestal


1 PC

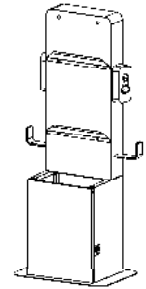

Expansion Bolt


(M12 x 80)

4 PCS



Screw (M12 x 30)

4 PCS

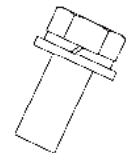

Lifting Eye Bolt (M12)

4 PCS




Hex Key (1/4-inch)

1 PC




Drilling Template

1 PC

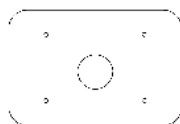


T25 Torx Screwdriver

1 PC




Triangle Socket Key

2 PCS




Packing List

2 PCS

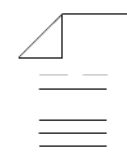


For trolley-mounting installation:

MaxiCharger
1 PC

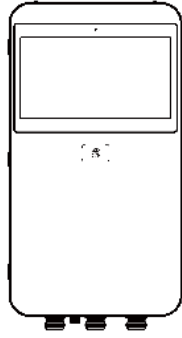


Trolley
1 PC

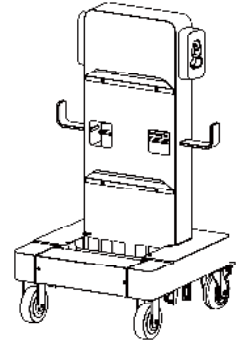


Lifting Eye Bolt (M12)
4 PCS



Screw (M12 x 30)
4 PCS

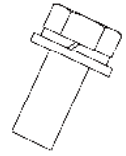


Triangle Socket Key
2 PCS



Hex Key (1/4-inch)
1 PC



**Industrial Plug
(with Cable)**
1 PC

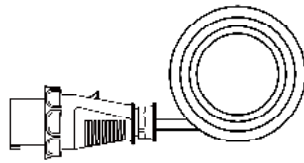


Packing List
2 PCS



For MaxiCharger with pedestal:


Main Unit

1 PC

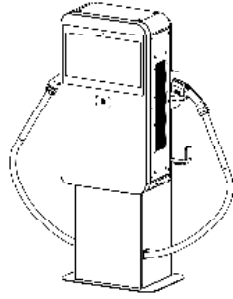


Lifting Eye Bolt (M12)

4 PCS

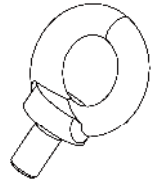


**Expansion Bolt
(M12 x 80)**

4 PCS




Triangle Socket Key

2 PCS



T25 Torx Screwdriver

1 PC



Hex Key (1/4-inch)

1 PC




Packing List

1 PC



Drilling Template


1 PC

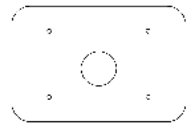

For MaxiCharger with trolley:

Main Unit

1 PC

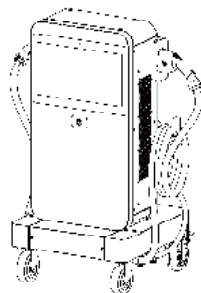


Hex Key (1/4-inch)

1 PC



Triangle Socket Key

2 PCS




Packing List

1 PC



4.3.2 Recommended Tools

- Spirit Level
- Pencil
- Drill
- M12 Wrench
- Brush
- Hammer
- Compressed Air
- Marker
- Crane
- Wire Stripper
- Crimping Tool
- Cable Lug
- Flathead Screwdriver
- Phillips Screwdriver
- 8 mm Socket Wrench
- 10 mm Socket Wrench
- 13 mm Socket Wrench

 **NOTE**

The tools mentioned above are not included in the packages. Ensure they are readily available prior to installation.

5. Installation

There are three ways to mount the MaxiCharger:

- On a pedestal
- On a trolley
- MaxiCharger with pedestal

General Installation Procedures:

1. Unpack the shipping crate.
2. Move the equipment to the installation site.
3. Mount the equipment.
4. Complete the power supply wiring.
5. Connect the MaxiCharger to the Internet.
6. Finish installation.

The installation work shall be carried out after a suitable location is chosen.




CAUTION

- Cut off the power supply before opening the MaxiCharger.
- Do not touch the inside components of the MaxiCharger while it is powered on.
- Ensure no voltage is applied while checking the MaxiCharger.
- Operate the MaxiCharger only when its door is closed and locked.

5.1 Unpack

1. Check the Shockwatch and tilt and inversion indicators.

Observe the sensors attached to the package for the degree of the tilt and complete overturn and check the Shockwatch. If the sensors demonstrate over 30° of tilt or total overturn, or the Shockwatch displays red, contact Autel customer service and the delivery personnel, and then inspect the product for any damage. **Do not** accept the delivery until the inspection is complete and no damage is found.

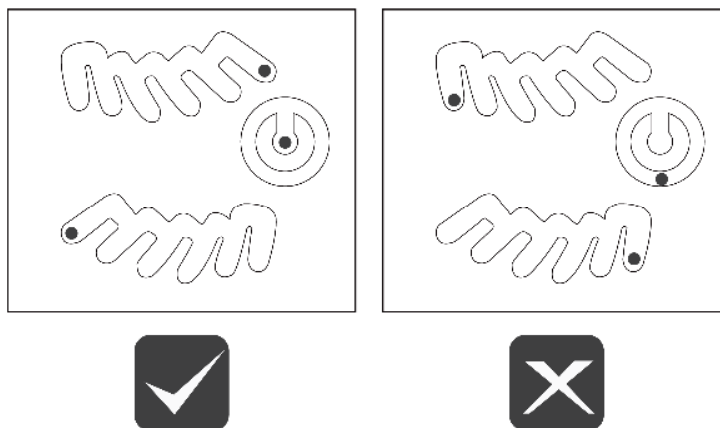


2. Remove the outside packaging and interior protection materials in accordance with the “Unpack Wooden Case” instructions on the packages.
3. Inspect the MaxiCharger and the parts for damage. If damage is evident or the parts are not consistent with the order, contact your local dealer.
4. Ensure that all parts are delivered according to the order.

5.2 Move the MaxiCharger

It is recommended to move the MaxiCharger to the installation site using appropriate hoisting equipment (crane, straps, and so on).


1. Remove the equipment from its packaging.
2. Remove the four screws at the top of the charger using a flathead screwdriver. Set them aside.

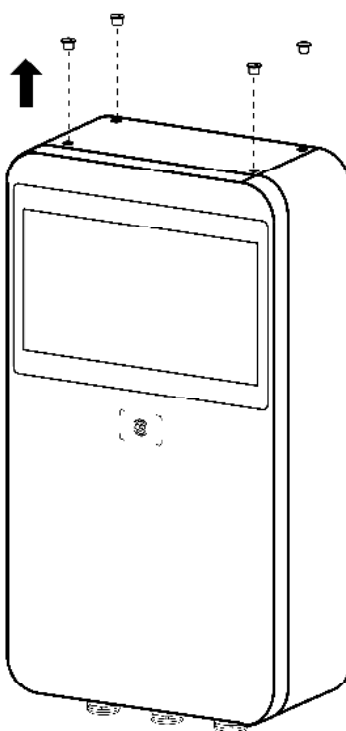

3. Install the four M12 lifting eye bolts into the four holes and tighten the bolts.
4. Connect the cables of the hoisting equipment to the eye bolts' lifting loops.
5. Move the equipment to the installation site.

 **CAUTION**

Do not tilt over 40 degrees when hoisting the equipment.

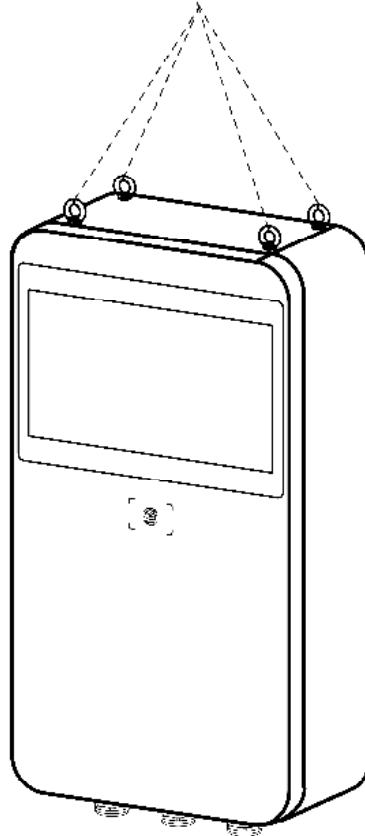

5.3 Mount the Equipment


5.3.1 Mount on a Pedestal

 **IMPORTANT**

- Always check local codes to ensure compliance. The guidelines described here are the minimum requirements. Consult an engineer to ensure that the installation complies with all applicable codes.
- Check the dimensions of the existing concrete surface. To safely mount the equipment, the concrete should be at least 3 inches (80 mm) thick.
- The concrete surface must be perfectly flat and level.


Step 1

1. Trench and excavate a cable tunnel to accommodate the conduit. The outer diameter of the conduit should not exceed 5 inches.
2. Feed the conduit and wires to the designated location through the exit opening, leaving conduit stub-up minimum 4 inches (100 mm) and approximately 23.6-inch long (600 mm) wires above the surface.

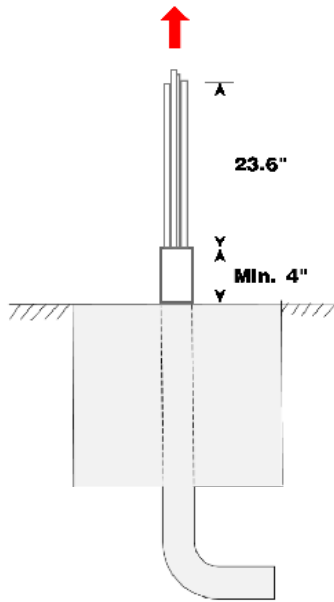


Step 2

1. Place the drilling template on the concrete surface, aligning its central hole with the exit opening. Ensure its front side is facing forward.
2. Mark the four mounting holes on the concrete surface and remove the drilling template.
3. Drill four holes measuring 0.63 inch (16 mm) in diameter and 3.15 inches (80 mm) in depth into the concrete.
4. Clean all dust from the holes using a brush and compressed air.

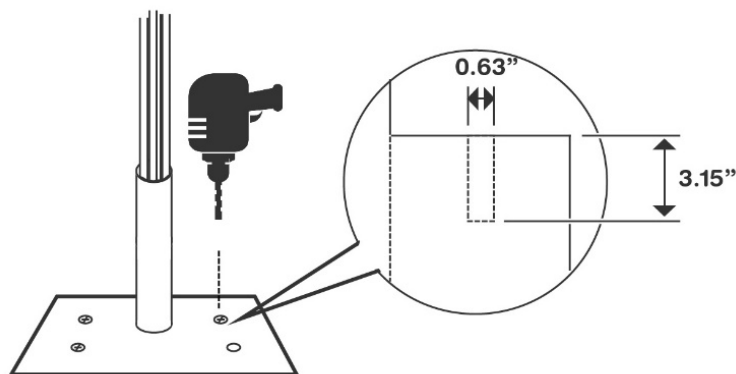


Step 3

1. Tap the four M12 x 80 bolts into the drilled holes.
2. After the expansion sleeves (A) are stuck, remove the bolts (C) and flat gaskets (B) using an M12 wrench. **Set them aside.**

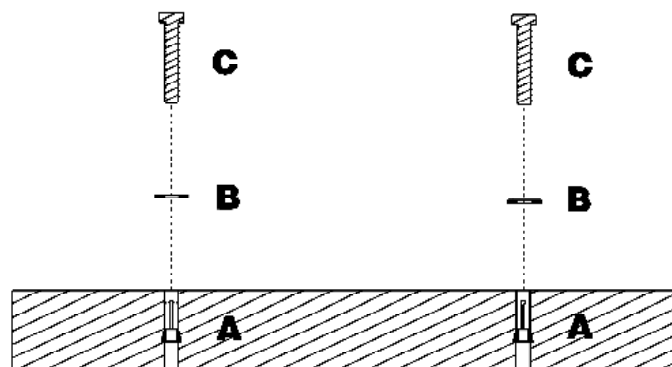


Step 4

1. Use the T25 Torx screwdriver to unscrew the four M5 x 12 security screws and remove the front cover from the pedestal. **Set them aside.**

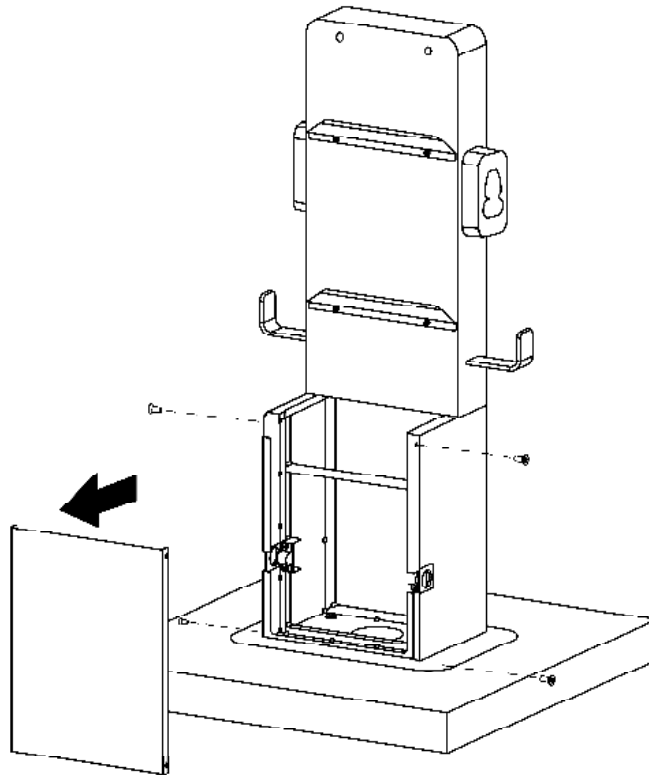


2. Mount the pedestal onto the mounting location, aligning with the mounting holes.
3. Level the pedestal using a spirit level.
4. Reinstall the flat gaskets and bolts. Torque the bolts to 33-41 ft·lb (45-55 N·m) to secure the pedestal.

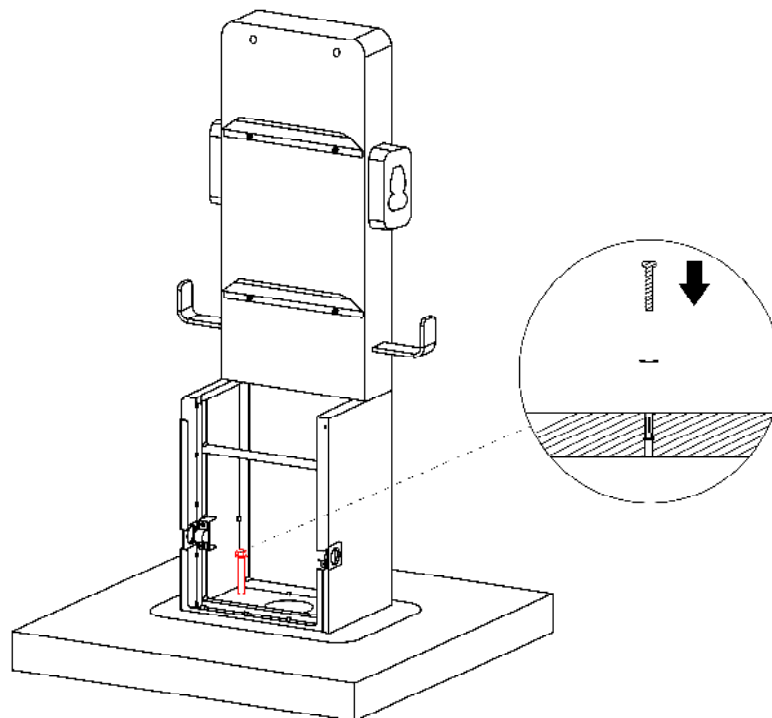


Step 5

Mount the MaxiCharger onto the pedestal by hoisting. Then hang the grooves (**B**) on the back of the charger onto the pedestal's protrusions (**A**). Ensure the charger is securely attached.

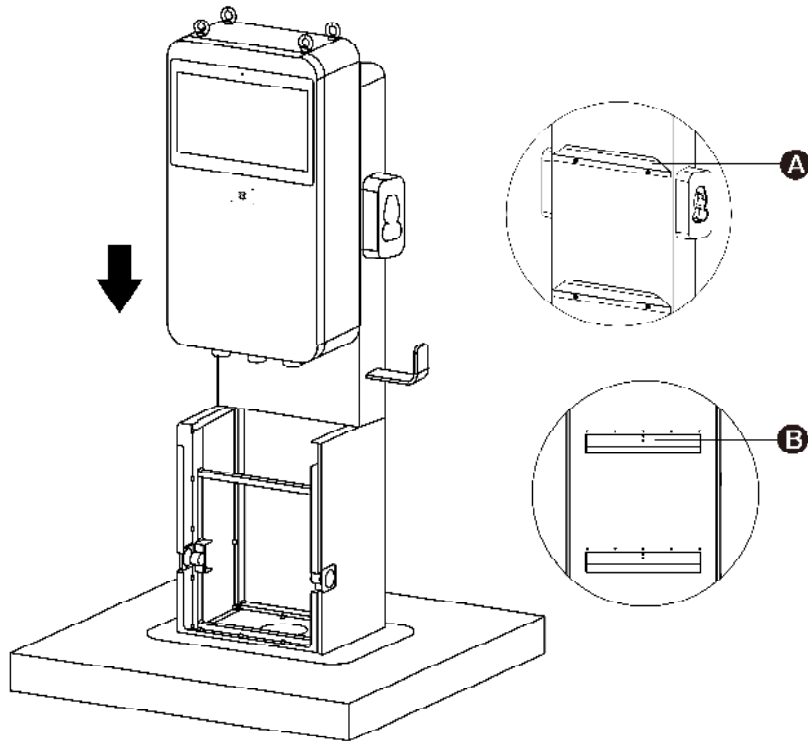

Step 6

Insert two M12 x 30 screws into the bottom of the charger (A) and secure the charger to the pedestal using an M12 wrench.

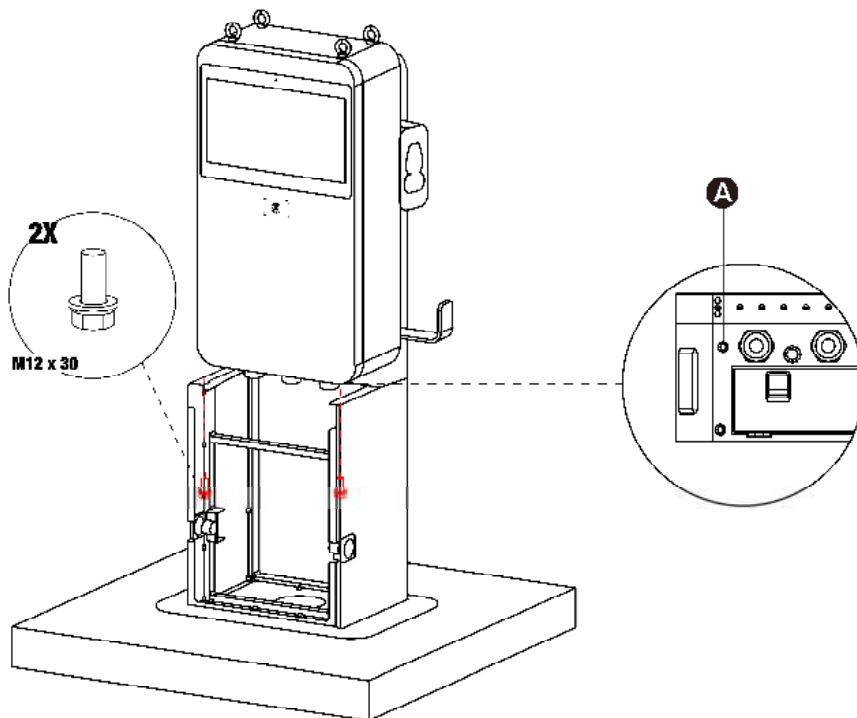

Step 7


Remove the four lifting eye bolts and reinstall the top screws.

5.3.2 Mount the MaxiCharger with Pedestal

For the “MaxiCharger with pedestal” model, follow the steps in [Section 5.3.1](#) (skip Step 5 and 6) to mount the equipment.

5.3.3 Mount on a Trolley

1. Loosen the four M5 x 12 screws using a Phillips screwdriver and remove the trolley's front cover. **Set them aside.**

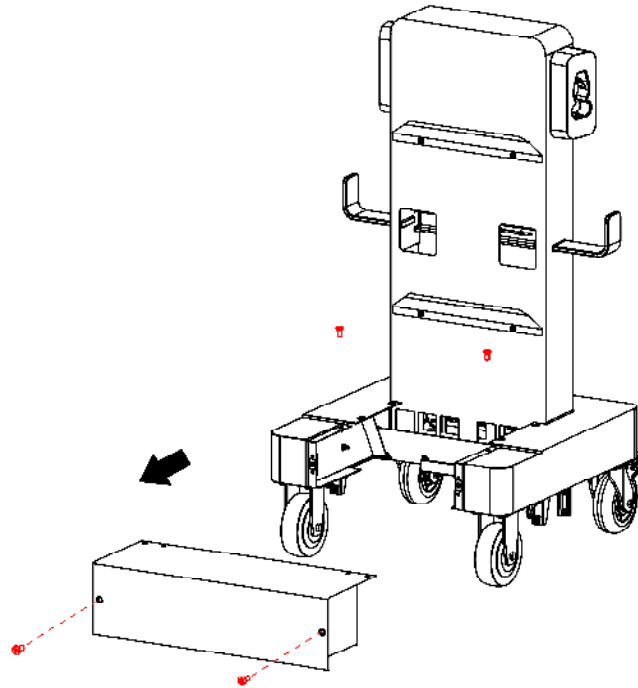


2. Lift the MaxiCharger onto the trolley. Position the groove (B) on the back of the MaxiCharger to fit the protrusion (A) of the trolley. Ensure the MaxiCharger is securely attached.

NOTE

When lifting the MaxiCharger onto the trolley, activate the foot brakes on the rear wheels to prevent the trolley from moving.

3. Insert and tighten the two M12 x 30 screws using an M12 wrench to secure the MaxiCharger.

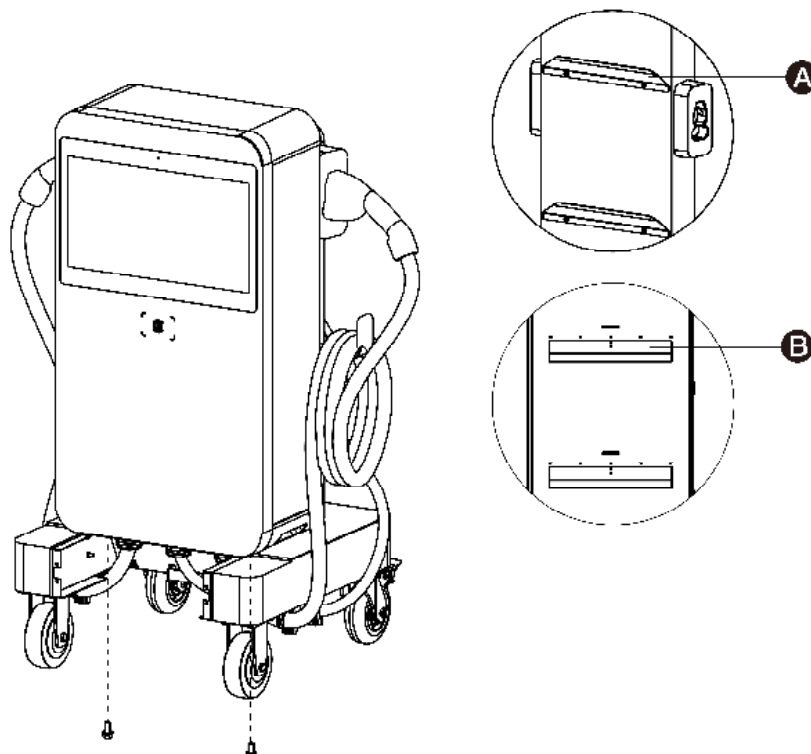

4. Remove the four lifting eye bolts and reinstall the top screws.

5.4 Power Supply Wiring

WARNING

Risk of Electric Shock

- Only a qualified electrician is allowed to determine the electrical requirements and connect the wires.
- Ensure the power is off before connecting the wires.


IMPORTANT

Before connecting the wires, ensure the following requirements are met:


- Electrical input rating must be 480V three-phase in Wye or Delta configuration (Neutral is not required).
- Use 90-degree copper wire only.
- The circuit breaker at the panel must be off.
- The MaxiCharger must be grounded to true earth.
- An insulated grounding conductor must be installed as part of the branch circuit that supplies the MaxiCharger.
- The grounding conductor should be grounded to earth at the service equipment or, when supplied by a separately derived system, at the supply transformer.
- All connections must comply with all local codes and ordinances.

5.4.1 Open the Cabinet Door

1. Flip open the lock covers (A) on the right side of the charger. Then push the triangle socket key into the lock and turn it counterclockwise to open the side door. Ensure the triangle of the key matches that of the lock when pushing.

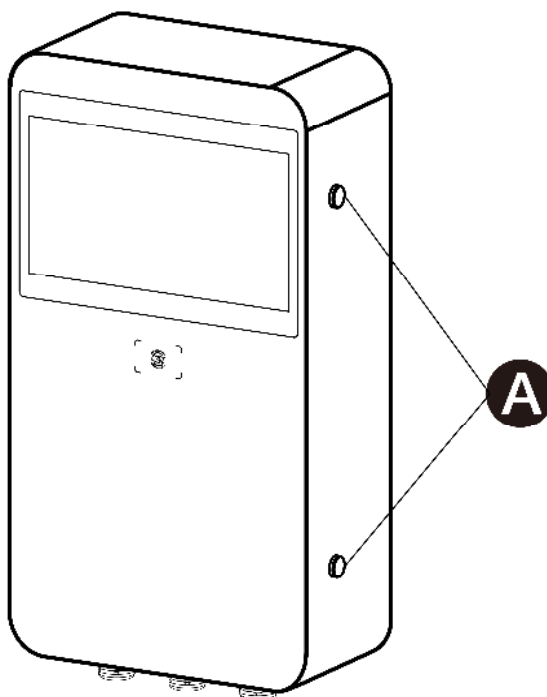


2. Loosen the two M8 hex screws (A) using the hex key and open the cabinet door.

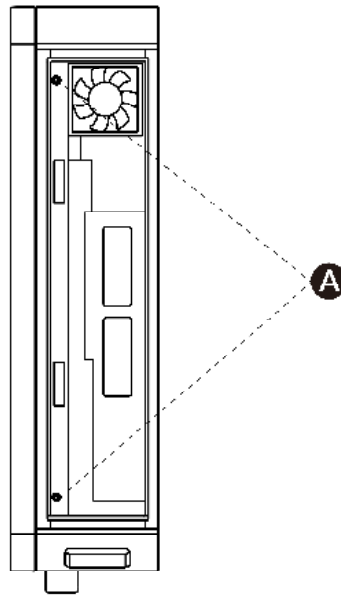

5.4.2 Connect the AC Input Cable

1. Loosen the five M6 x 16 screws using a Phillips screwdriver to remove the galvanic isolation board (A). Set them aside.

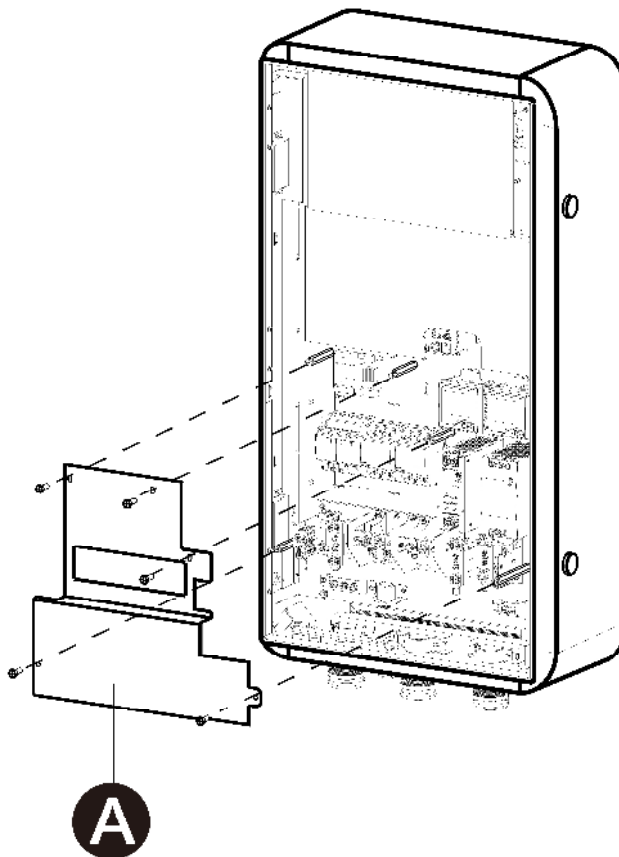

2. Pull the wires from the conduit stub-up and guide them through the AC inlet hole.
3. Use the wire stripper to remove correct length of the insulation from the end of the wires. Ensure the stripped length is compatible with the cable lugs.
4. Use the crimping tool to attach the cable lugs to the end of the wires.

5. Loosen the M6 screw on the PE busbar using a 10 mm socket wrench. Then attach the PE wire to the PE connector **(A)** and screw the M6 screw to 4.4 ft·lb (6 N·m).
6. Loosen the M8 fasteners using a 13 mm socket wrench and attach the wires to the connectors:
 - L1 wire to the connector B.
 - L2 wire to the connector C.
 - L3 wire to the connector D.
7. Reinstall the M8 fasteners and tighten them to 4.4-8.9 ft·lb (6 to 12 N·m).
8. Reinstall the galvanic isolation board.

NOTE

For the trolley-mounting model, skip Step 3 and 4.

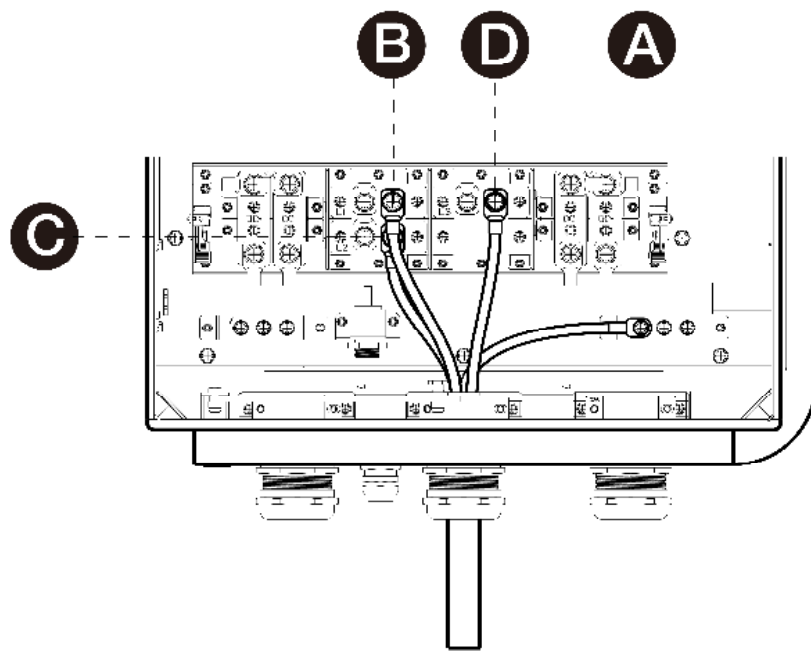


Table 5-1 AC Input Cable Specifications


Power Input Voltage	480V
Input Current	<ul style="list-style-type: none"> ● Maximum: 52 A ● Nominal: 50 A
Wire Gauge	<ul style="list-style-type: none"> ● Min. 6 AWG ● Max. 5 AWG
Cable Lug Size (mm)	<ul style="list-style-type: none"> ● L: 28 ± 2.5 ● L1: 18 ± 2 ● D1: 6.2 ± 0.5 ● d1: 5.8 ± 0.4 ● D2: 9.6 ± 0.6 ● d2: 8.8 ± 0.6 <div style="text-align: center;"> </div> <p><i>NOTE: L is short for length and D (d) is short for diameter.</i></p>

5.5 Internet Connection

The MaxiCharger can be connected to the Internet via Ethernet cable, cellular network or Wi-Fi. Choose an appropriate connection method as applicable.


5.5.1 Connect the Ethernet Cable

1. Loosen the Ethernet cable gland.
2. Put the Ethernet cable through the Ethernet cable port at the bottom of the MaxiCharger.
3. Plug the Ethernet cable into the RJ45 port.
4. Tighten the cable gland.

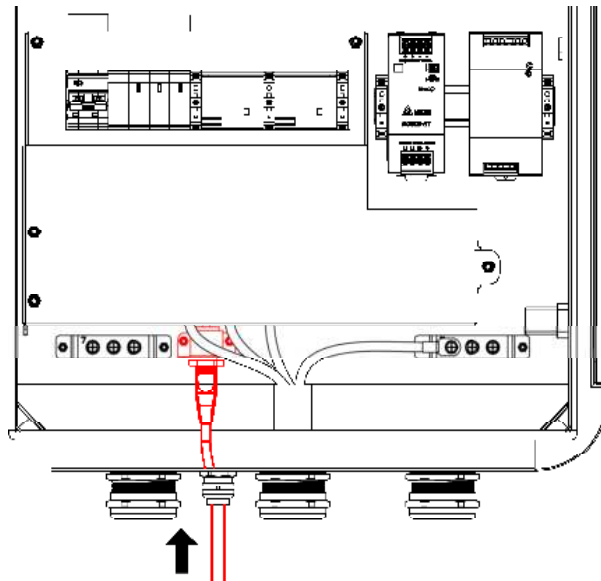

5.5.2 Install the SIM Card

1. Press the button (A) and slide the card tray to the right to remove it.
2. Place the SIM card into the card tray. Ensure the card is inserted correctly.
3. Reinstall the card tray.

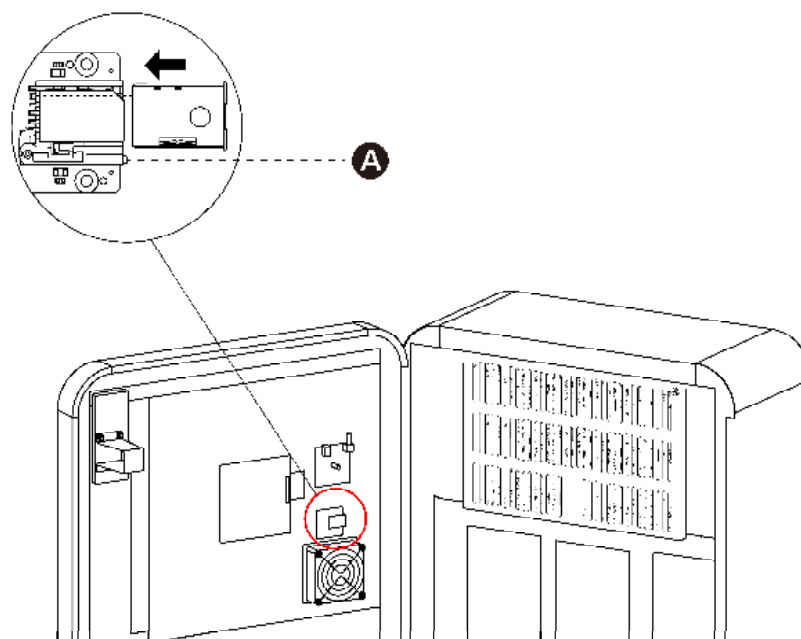

5.6 Finish Installation

For Pedestal-mounting:


STEP 1

Close the cabinet door by tightening the two M8 hex screws. Then close the side cover and turn the socket key clockwise to lock it.

STEP 2

Organize the charging cables as described below:

1. Remove the two rubber rings **(A)** from the pedestal. Then remove the strain reliefs **(B)** by unscrewing four M4 screws on both sides of the pedestal using a Phillips screwdriver.

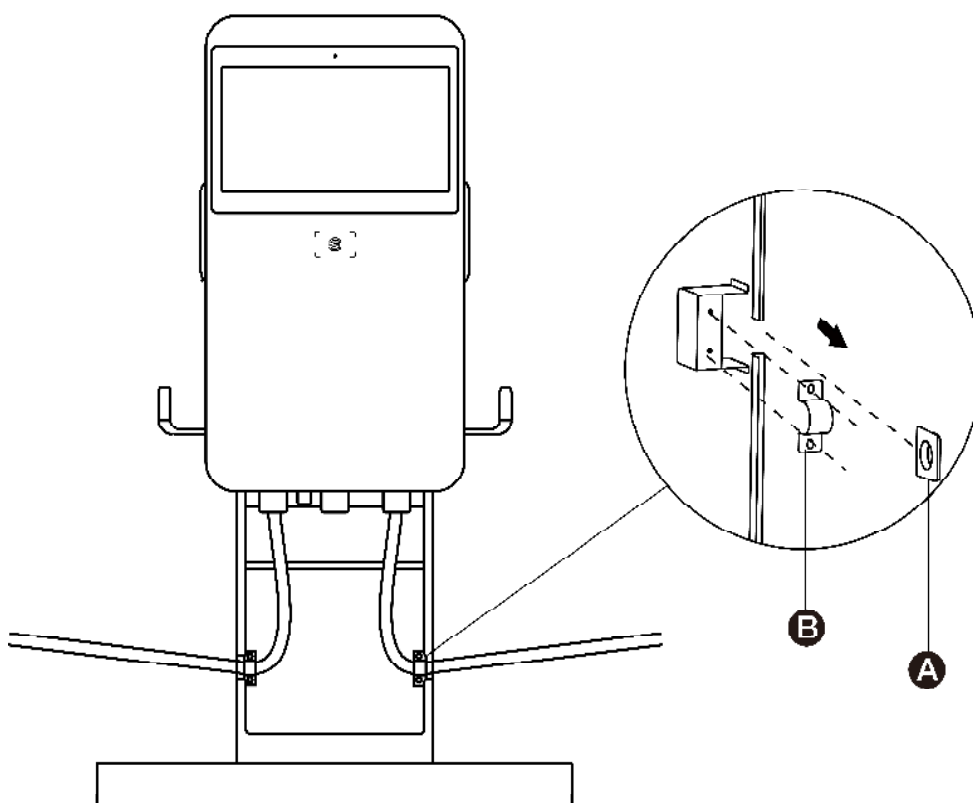


2. Use the strain reliefs to secure the charging cables, ensuring that the charging cables are allowed to remain their bending tolerance. Fix the strain reliefs by reinstalling and tightening the four M4 screws to 0.9 ft·lb (1.2 N·m).
3. Put the rubber rings onto the charging cables via the openings.
4. Drape the cables over the cable holders on both sides of the pedestal and plug the connectors into the holsters.
5. Reinstall the pedestal's front cover by inserting the four M5 x 12 security screws. Tighten the screws to 1.5 ft·lb (2 N·m).

For MaxiCharger with Pedestal:

1. Close the cabinet door by tightening the two M8 hex screws. Then close the side cover and turn the socket key clockwise to lock it.
2. Reinstall the pedestal's front cover by inserting the four M5 x 12 security screws. Tighten the screws to 1.5 ft·lb (2 N·m).

For Trolley-mounting:

1. Loosen the M5 nuts using an 8 mm socket wrench and remove the three strain reliefs **(A)**. Then secure the cables with the strain reliefs by reinstalling the M5 nuts.

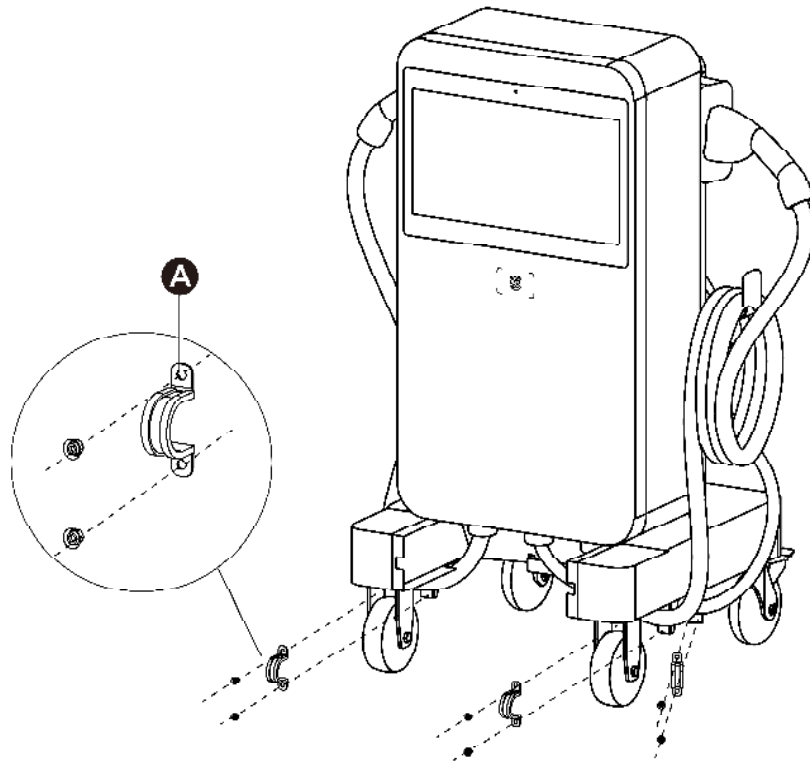

2. Drape the industrial plug cable over the cable holder on the back of the main unit.
3. Stretch the charging cables to remove any kinks and drape them over the cable holders. Dock the EV connectors in the holsters.
4. Reinstall the four M5 x 12 screws and the trolley's front cover.
5. Close the cabinet door by tightening the two M8 hex screws. Then close the side cover and turn the socket key clockwise to lock it.

5.7 Upstream Protective Device

The local utility may require an RCD to be installed. The recommended device type is provided below:

Device	Specifications
Upstream residual current device (RCD)	Type A or Type B, with a rated residual operation current of 30 mA.

5.8 Prepare for Operation

For the pedestal-mounting and MaxiCharger with pedestal models:

- Ensure all electrical connections are clean, tight, and free of wire strands and metal shavings.
- Wipe all surfaces with a soft cloth dampened with warm water.
- Turn the external circuit breaker on and verify that the charger is receiving 277 VAC phase to ground and 480 VAC phase to phase, $\pm 10\%$. Voltages must be verified by a qualified electrician.
- Turn on the internal circuit breaker.

NOTE

If the ambient temperature is below $-4\text{ }^{\circ}\text{F}$ ($-20\text{ }^{\circ}\text{C}$), it may take 3 to 5 minutes for the touchscreen to display as a preheating process. In extreme cases, the display module will be reset to ensure the normal operation of the equipment.

For the trolley-mounting and MaxiCharger with trolley models:

IMPORTANT


- Do not turn on the circuit breaker to the MaxiCharger until the industrial plug is securely connected.
 - Once a charge session ends, cut off the power supply before disconnecting the industrial plug.
1. Wipe all surfaces with a soft cloth dampened with warm water.
 2. Open the cover to the socket.
 3. Plug the industrial plug into the socket and fully push it. Then screw the bayonet ring clockwise to secure the connection.
 4. Turn on the circuit breaker.

The MaxiCharger is now ready for operation.


5.9 OCPP Settings

Follow the steps below to set the OCPP parameters.


1. On the Standby Screen, tap the “currency (\$)” icon on the lower-left corner to enter the Cost Details Screen.

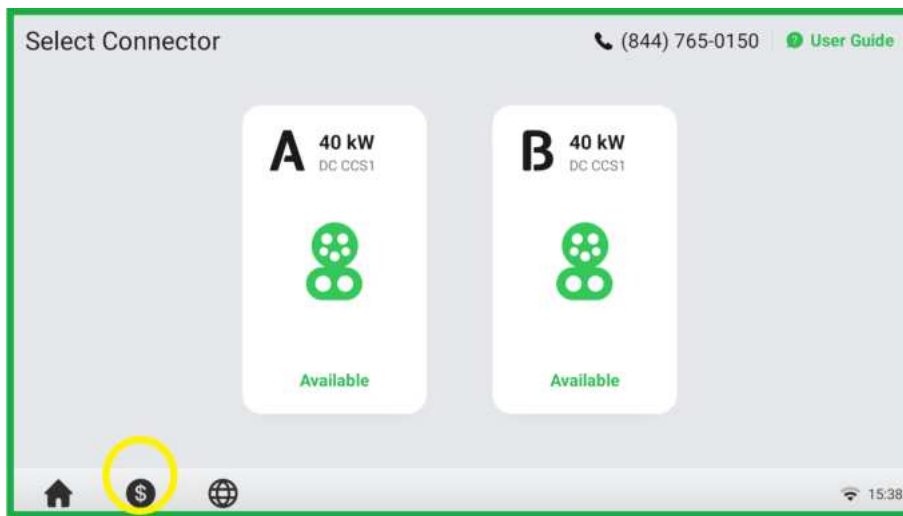


2. On the Cost Details Screen, **double tap** the upper-left corner to enter the next page.

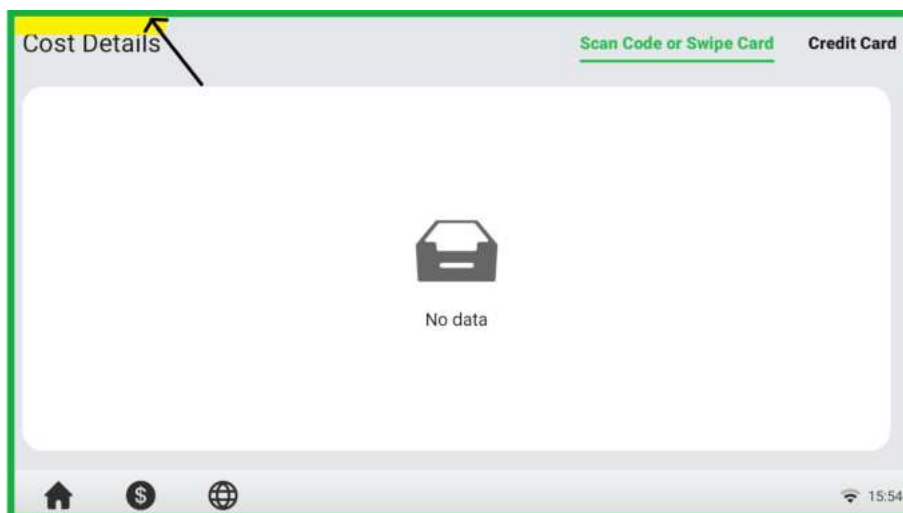


3. Select **Device Maintenance** on the screen.

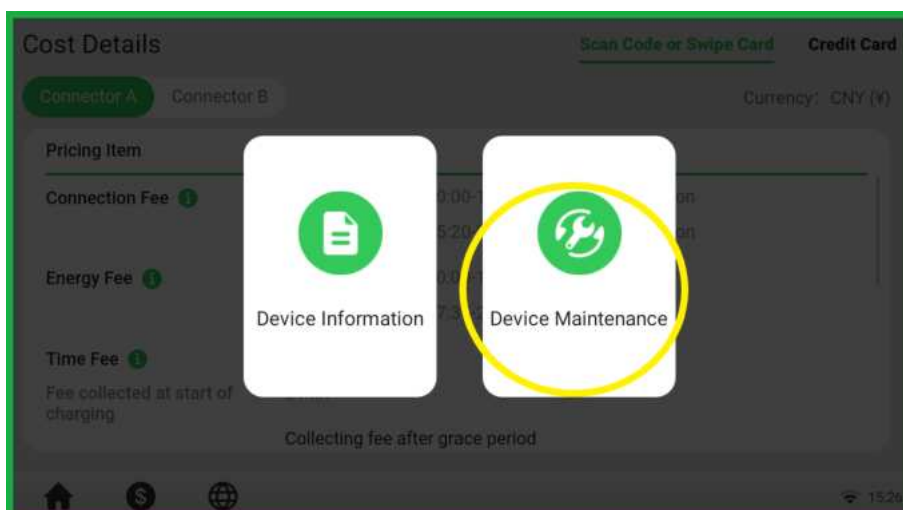

- A password prompt will appear. Enter **the last 6 digits of the product's serial number** to continue, which can be found on the product label.

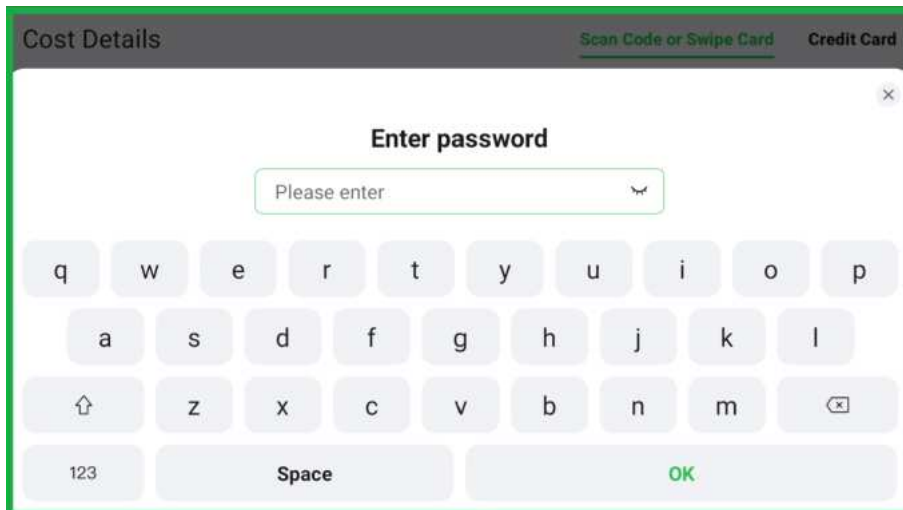

- On the Device Maintenance Screen, select **Set Parameters**.

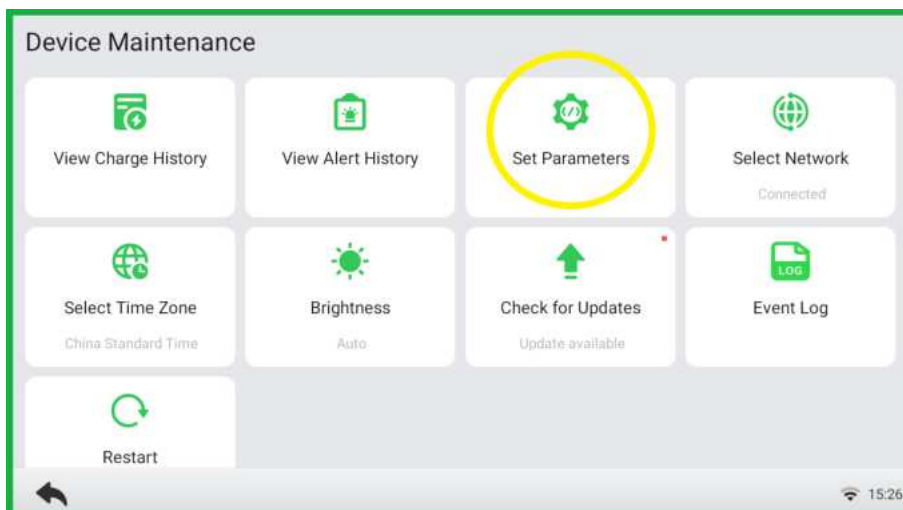

- Set the OCPP parameters accordingly.

Parameter Name	Parameter Value	Parameter Description
Payment method	Scan code/Swipe card via RFID/ Swipe credit card	/
Backend switch	Available	/
Regional server	US	/
Running environment	Production environment	/
OCPP IP	gateway-eneprodux.autel.com	OCPP master address
OCPP-URL address	/ws/webSocket?sn=	OCPP-URL address
Port number	443	OCPP port number

5.10 Autel Charge Cloud Configuration

To ensure the normal operation of the charger, configuring the Autel charge cloud is necessary. This platform is a one-stop charging management solution intended to address the needs of many use cases including residential, commercial, governmental, car dealers, and fleets. Contact Autel technical support for subscription and obtain the *Autel Charge Cloud Manual* for more details.

If a third-party cloud platform is used, consult their personnel for configuration.

6. Operation

6.1 Charge Sessions

General charging procedures:


➤ **To charge an EV**

1. Park an EV with the charging port within reach of the connector.
2. Plug in the vehicle.
3. Start the charge session.
4. Stop the charge session.

 **WARNING**

- Do not cover the vent during charging.
- Do not clean or operate in the EV during charging.

6.1.1 Standby Mode

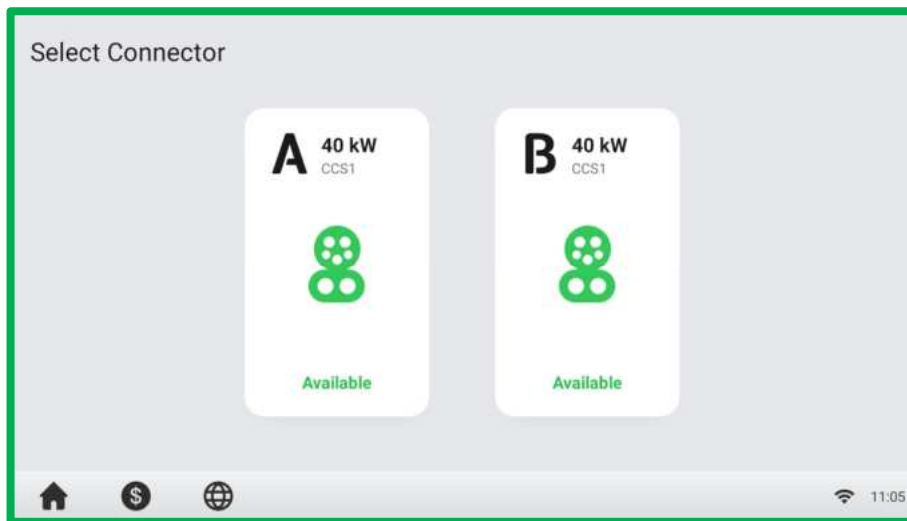

After a connector is successfully connected to your EV, the MaxiCharger can automatically recognize the connector, then the corresponding connector's Authorization Screen will appear.

If no operation is performed for a long time on the Authorization Screen, the Standby Screen will appear. Manually select the appropriate connector on the touchscreen.


6.1.2 Authorization

IMPORTANT

- Observe the screen for any abnormality, such as an error message, before starting a charge session. Check the surroundings and the MaxiCharger for any abnormality or damage as well.
- DO NOT operate the MaxiCharger if the screen displays an error message. Contact Autel personnel for support.


When the Authorization Screen appears, you can use any of the following methods to start a charge session:

- Scan the QR code on the screen
- RFID card
- Plug & charge
- Credit card (optional)

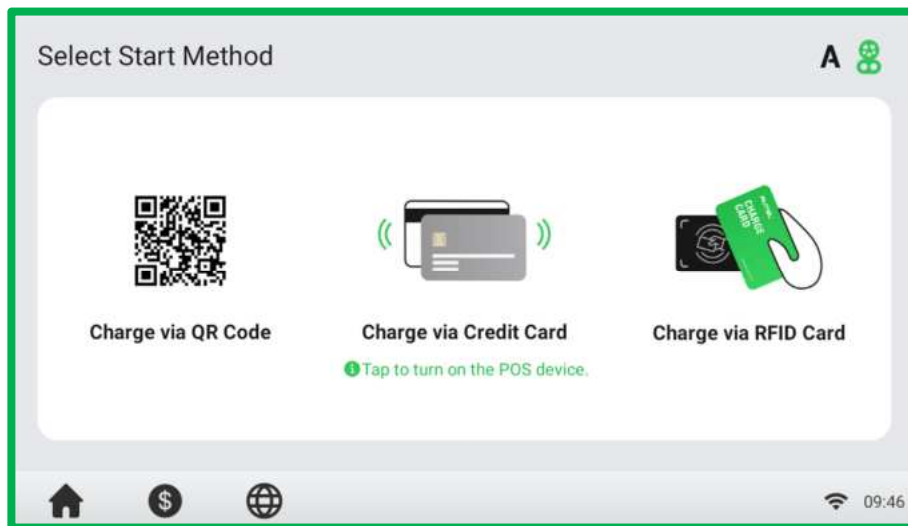


6.1.3 Start Charging

The MaxiCharger enters communication with the EV following a successful authorization. The charge session will start automatically after passing safety tests.

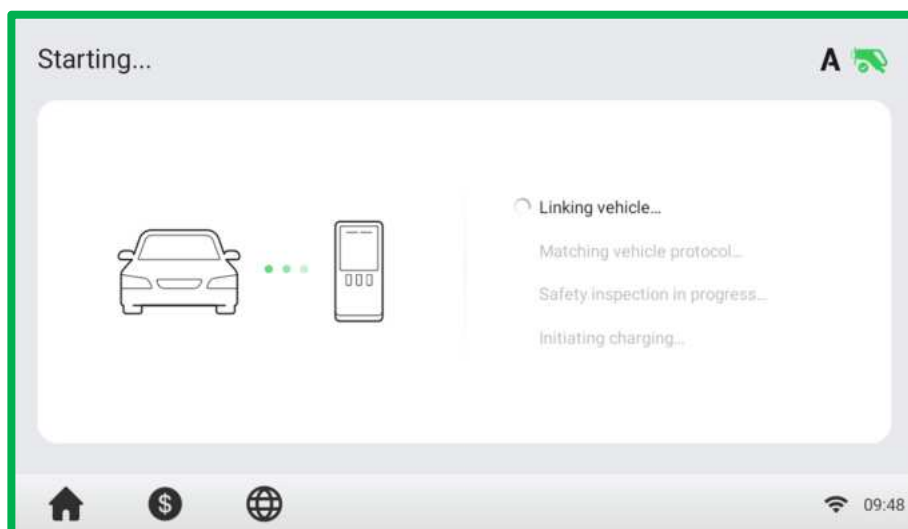

6.1.4 Charging

Information about the charging duration, volume, cost, and power will appear on the Charging screen. Tap the **Right Arrow** button on the right to view more information about the charging status, including SoC (State of Charge), current, and voltage.

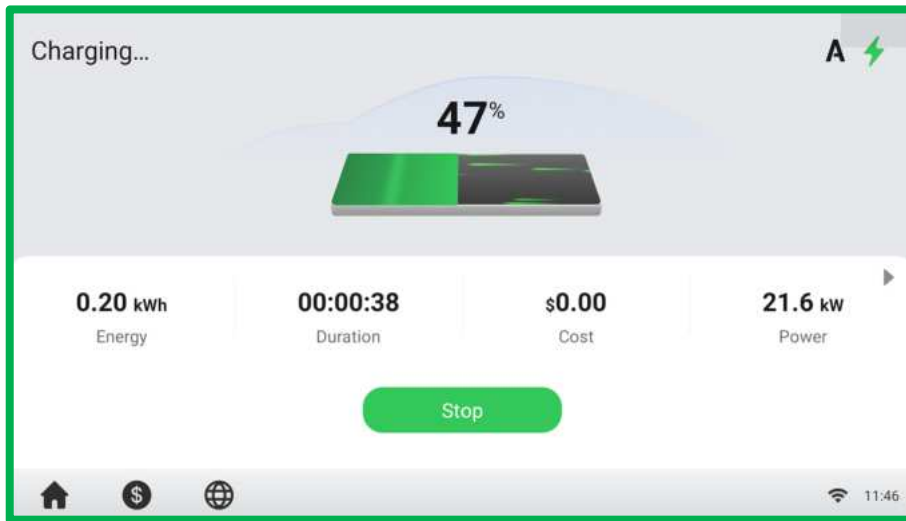

6.1.5 Stop Charging


➤ To stop charging

1. Unplug the vehicle or tap the **Stop** button on the touchscreen.
2. If a session stops unexpectedly, the charger requires another authorization to restart a charge session. Use the same authentication method to begin the charge again:
 - QR Code/Credit Card: Tap the **Stop** button on the Charging Screen of the Autel Charge app.
 - RFID Card: Tap the RFID card on the card reader again to finish charging.

🚫 NOTE

The charging session stops automatically when the battery is full.

The transaction details will appear on the screen when a charge session is complete.

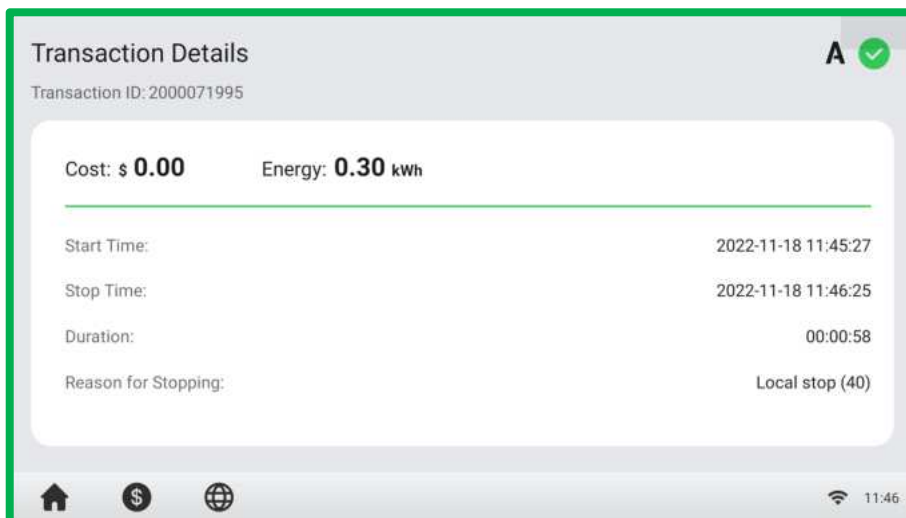

6.1.6 Finish Charging

Return the connector to the holster on the MaxiCharger.

6.2 Charging Errors

This section depicts several common problems that may arise during a charge session along with possible causes/solutions to resolve them. If the problem persists, contact your local dealer or Autel technical support.

6.2.1 Connector Connection Error

If the connector is not connected to the EV, then the Connector Not Connected screen will appear. Disconnect completely, then plug in the EV and recheck the screen to see if the error message is resolved.

6.2.2 Authorization Failure

The Authorization Failure screen appears when there is an error processing the chosen authentication method. The cause and possible solution(s) will display on the screen. Follow the on-screen instructions to resolve the problem, or contact the local dealer or Autel technical support.

6.2.3 Charge Start Failure

The Charge Start Failure screen appears when the charger has failed to pass the initialization process. The cause and possible solution(s) will display on the screen. Follow the on-screen instructions to resolve the problem.

6.2.4 Charging Failure

The Charging Failure screen appears when various errors occur during a charge session. The cause and possible solution(s) will be displayed on the screen. Follow the on-screen instructions to resolve the problem, or contact your local dealer or Autel technical support.

6.3 De-energize the MaxiCharger

General Procedure:

1. Set the upstream breaker which provides the power to this MaxiCharger to **OFF** and lock it. Ensure that this breaker stays in the **OFF** position during the procedure.
2. Open the cabinet door.
3. Measure the AC voltage. Ensure that all the measured voltages are 0 V.
4. Measure the DC voltage. Ensure that all the measured voltages are 0 V.
5. Close the door.


6.3.1 Measuring the AC Voltage

Use a voltage tester to measure the AC voltage between the terminals on the surge protection device.

- L1 to L2
- L1 to L3
- L2 to L3

NOTE


The surge protection device switch shows the indications L1, L2, and L3.

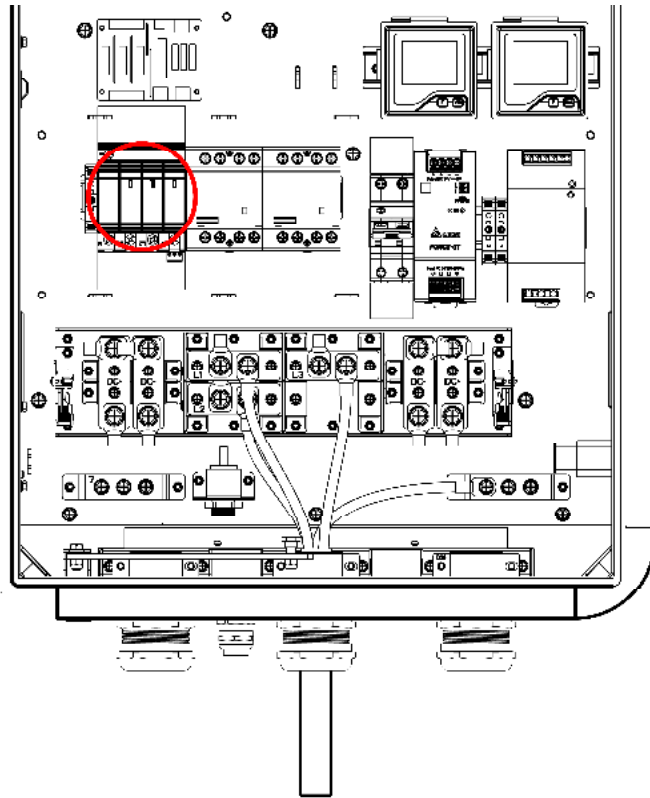

6.3.2 Measuring the DC Voltage

Use a voltage tester to measure the DC voltage between the output terminals:

- Power module group output 1- (B) to power module group output 1+ (A)
- Power module group output 2- (D) to power module group output 2+ (C)
- EV charging cable 1 output - (F) to EV charging cable 1 output + (E)
- EV charging cable 2 output - (H) to EV charging cable 2 output + (G)

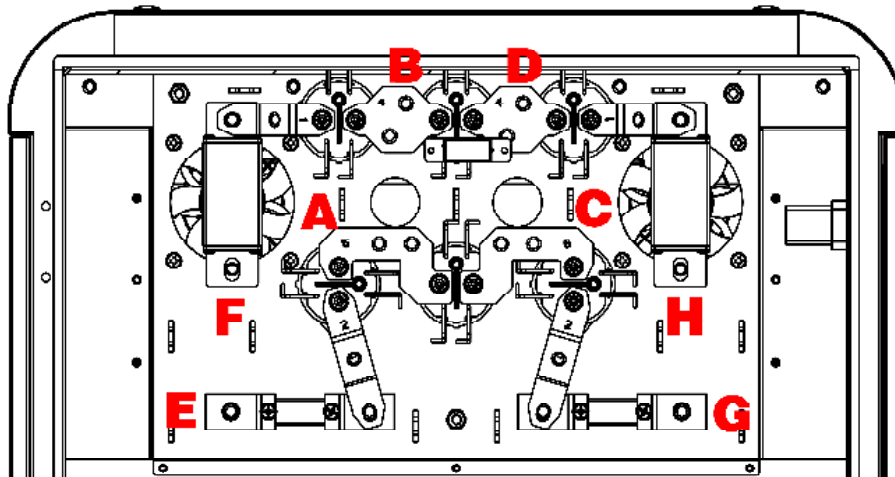

7. Maintenance

7.1 Routine Maintenance

Routine maintenance can keep the MaxiCharger in a safe and stable state.

- Clean the cabinet every quarter, tighten the screws and bolts of key parts, and check whether the wire connection of the connector is burned out. If any abnormality is found, replace the parts in time.
- Clean the air filter and dust filter at least twice a year.
- Test the residual current device once a year.

WARNING

- Disconnect the power supply to the MaxiCharger during the entire maintenance procedure.
- Ensure unauthorized personnel are kept at a safe distance during maintenance.
- Wear proper personal protective equipment, such as protective clothing, safety gloves, safety shoes, and safety glasses.
- If the safety devices are removed for maintenance, reinstall them after completing the work.

7.1.1 Cleaning the Cabinet

The cabinet is powder-coated. The coating must be kept in good condition. When the MaxiCharger is in a corrosion sensitive environment, superficial rust may appear on welding points. Visible rust has no risk to the integrity of the cabinet.

➤ **To remove rust**

1. Stop any charging processes and power off the MaxiCharger.
2. Remove rough dirt by spraying with low-pressure tap water.
3. Apply a neutral or weak alkaline cleaning solution and let it soak.
4. Remove dirt by hand with a damp and non-woven nylon cleaning pad.
5. Rinse thoroughly with tap water.
6. Apply wax or a rust-preventive primer for extra protection if needed.

7.1.2 Residual Current Device Maintenance

The internal residual current circuit breaker (RCCB) should be tested annually for correct functioning. Before testing, disconnect the MaxiCharger with the EV and stop any charging processes.

➤ To test the RCCB


1. Open the cabinet door. When the door is open, the MaxiCharger should not be directly exposed to a windy and rainy environment.
2. The MaxiCharger must be in the Standby mode. Tapping the touchscreen can wake up the MaxiCharger.
3. Locate the RCCB, and press the T button to start test.
 - Pass: The RCCB will trip and restore the **T** button to its original position.
 - Fail: The RCCB does not trip. Please contact Autel technical support. Do not use the MaxiCharger until the repair is completed.
4. Close the cabinet door after the test is finished.
5. Mark the time when the test is needed to be repeated annually.

7.1.3 Cleaning and Replacing the Air Filter

The MaxiCharger is equipped with an air inlet filter at the bottom. Clean the air filter every 3 months (not exceeding 6 months). Replace the air filter once a year.

➤ To clean or replace the air inlet filter

1. Ensure there is no active charge session and perform lockout-tagout to secure the charger.
2. Pop open the two buckles (**A**) at the bottom of the charger and flip the bezel (**B**) open.
3. Remove the air filter (**C**).
4. Clean the air inlet filter of debris or dust and reinstall the cleaned filter. Or install a new air inlet filter.
5. Close the bezel.

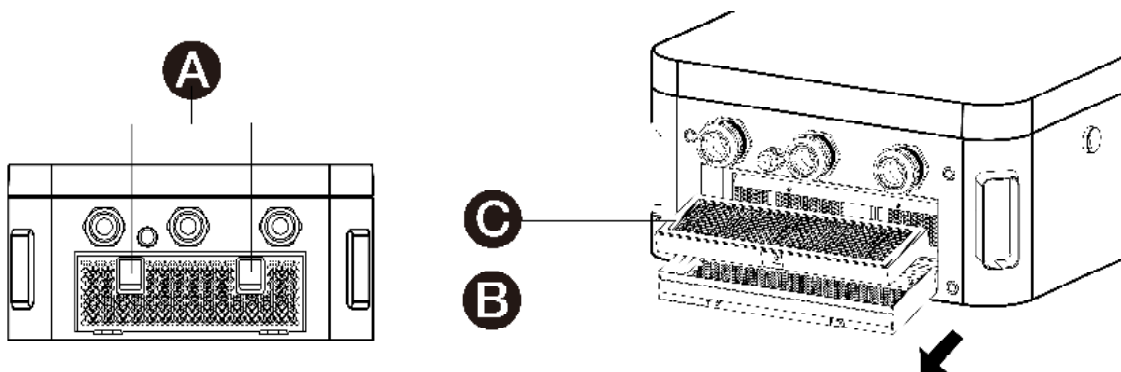


7.1.4 Fuse Inspection

The fuses inside the MaxiCharger should be inspected every year. Follow the instructions below to complete the inspections.

➤ To inspect the fuses

1. Ensure there is no active charge session and perform lockout-tagout to secure the charger.
2. Open the cabinet door and locate the fuse terminal blocks as shown in the diagram below.
3. Press the lever (A) and pull out the fuse terminal.
4. Check if the fuse is blown or appears broken.
5. Follow the procedures above to check all fuses.

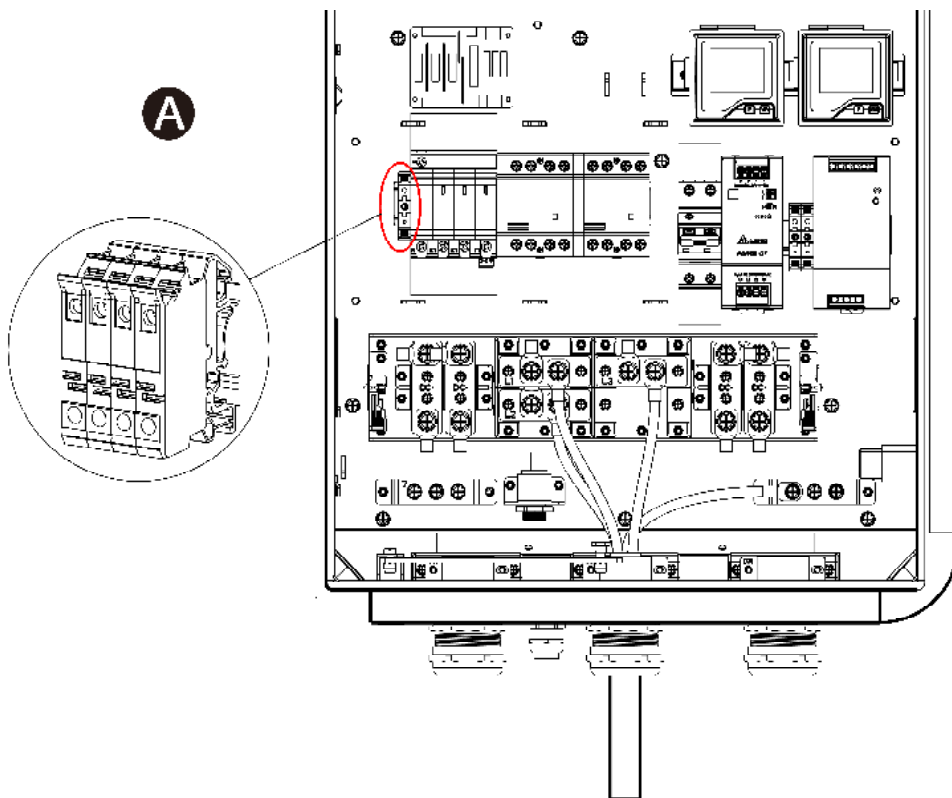

7.2 Inspection and Maintenance

Routine maintenance is needed when the MaxiCharger is operating in normal condition.

Refer to [Troubleshooting](#) or contact Autel technical support to resolve any error.

When parts need to be replaced, completely cut off the power supply upstream and inside the equipment before operating.

Regularly conduct a visual inspection of the following:

- Cable and connector: Check for cracks or ruptures.
- Display: Check for damage and cracks. Check whether the touchscreen works.
- Coating of the cabinet: Check for damage, cracks or ruptures.
- Cabinet: Check for rust or damage.

The following special inspections are needed for safe use:

- Check if the MaxiCharger was struck by lightning.
- Check if the MaxiCharger is damaged due to an accident or fire.
- Check the MaxiCharger installation site has been flooded.

 **WARNING**

Stop any charge session and do not connect the power to the MaxiCharger until all inspections are completed.

7.3 Remote Maintenance

The MaxiCharger can connect to the Autel cloud platform to monitor parameters in real time. Autel cloud platform provides remote upgrades, diagnosis, and services, and identifies any issue during operation process.

- Daily system self-check.
- Contact Autel technical support to resolve any issue found.

Autel service engineers can check logs, update configurations and programs, and provide remote maintenance services such as remote management, diagnosis, configuration, and upgrade.

7.4 Maintenance Schedule

Item	Frequency	Actions
Connector	Every 3 months	Check for cracks or ruptures on the connector.
Input Cable	Every 3 months	Check for cracks or ruptures on the cable.
Air Filter	Annually	Replace the inlet air filter.
Cabinet	Every 3 months	Clean and check for damage.

8. Troubleshooting

The table below describes the most common faults when operating the MaxiCharger. Contact Autel technical support if the fault encountered is not in this table.

Error	Error Code	Possible Cause	Solution
CP voltage abnormal	0x2037	It may be caused by signal interference, poor contact or software errors.	Perform remote restart or reset. If the fault persists, contact Autel technical support.
Communication error with the entire charging module group	0x3011	There is a problem with the module's address setting.	Power off the MaxiCharger and restart it.
Overtoltage	0x202D	The DC output voltage is above the upper limit of the vehicle or the rated voltage of the MaxiCharger during charging.	Stop the charge session and contact Autel technical support.
Communication error with the power control module	0x200E	The CCU does not receive messages from the ECU and the communication is timed out.	Perform remote restart or reset. If the fault persists, contact Autel technical support.
BMS communication error	0x2007	It may be caused by charging incompatibility.	Perform remote restart or reset. If the fault persists, contact Autel technical support.
Cooling fan abnormality	0x304A	Fan aged or damaged.	Power off the MaxiCharger and contact Autel technical support for repair or replacement of the fan.
Charging port electronic locking fault	0x2002	It might be caused by a vehicle-related fault.	Contact the vehicle manufacturer and Autel technical support.
CCU auxiliary power supply shutdown	0x202C	Sever power fault due to aged key components or lines.	Power off the MaxiCharger. Then locate the faulty component or line and contact Autel technical support for its repair or replacement.
Meter communication error	0x0001	Aged meter or line.	Stop the charge session and contact Autel technical support.
Insulation monitoring fault	0x2003	If it appears from time to time, it might be due to the vehicle or software error; if it appears frequently, there may be an aged key component.	Perform remote restart or reset. If the fault persists, contact Autel technical support.
AC contactor stuck	0x3008	AC contactor fault or line aging	Power off the MaxiCharger and contact Autel technical support.

Error	Error Code	Possible Cause	Solution
FPGA fault	0x3010	Controller fault	Stop the charge session, power off the MaxiCharger, and contact Autel technical support.
CCU current sampling and module output current accumulation fault	0x3014	Charging module output or sampling fault	Perform remote restart or reset. If the fault persists, contact Autel technical support.
Power distribution contactor sticking (charging possible)	0x3047	Contactor or sensor fault or line aging	Power off the MaxiCharger immediately and contact Autel technical support.
Communication error on one charging module	0x3051	Abnormal charging module	Contact Autel technical support to identify the fault, and then clear the fault or replace the module.
Fan fault with one charging module	0x305A	Abnormal charging module	Contact Autel technical support to identify the fault, and then clear the fault or replace the module.
Inconsistent CCU voltage sampling and the module output voltage	0x305C	Abnormal charging module	Contact Autel technical support to identify the fault, and then clear the fault or replace the module.
Insulation detection alert	0x2040	If it is a one-time problem, there is may be a falling object, and no operation is required; if it has occurred for several times, the connector cable may be damaged or there are foreign objects in the busbar.	Power off the MaxiCharger immediately and contact Autel technical support.
Charger offline	0x9001	Communication error between gateway and the Autel Charge Cloud	Check the network connection and OCPP configurations.

9. Specifications

9.1 Specifications

DC Output Connection

Charging Mode	Mode 4
Output Power	40 kW
Output Voltage	<ul style="list-style-type: none"> ● CCS1: 150 to 950 VDC ● CHAdeMO: 150 to 500 VDC
Maximum Output Current	<ul style="list-style-type: none"> ● CCS1: 133 A ● CHAdeMO: 125 A
Number of Outputs	<ul style="list-style-type: none"> ● 2 x CCS1 ● 1 x CCS1 + 1 x CHAdeMO ● 1 x CCS1
Peak Efficiency	≥ 96 %

AC Input Connection

Standard Wiring	4-wire 3-phase (L1, L2, L3, and Earth, no neutral)
Input Voltage	480 VAC + 10 % ~ -15 %
Input Current	<ul style="list-style-type: none"> ● Maximum: 52 A ● Nominal: 50 A
Input Frequency	60 Hz
Power Factor (> 50% Nominal Load)	≥ 0.99
Total Harmonic Distortion (> 50% Nominal Load)	≤ 5 %
Energy Metering	Accuracy: 2.5 %

General Characteristics

Enclosure Rating	NEMA 3S, IK10
Operating Altitude	6561.7 feet (2000 m)
Operating Temp. Range	-22 to +131 ° F (-30 to +55 ° C)
Storage Temp. Range	-40 to +158 ° F (-40 to +70 ° C)
Mounting	Mounting on floor or trolley
Weight	264.6 lbs. (120 kg)
Humidity	< 95 % RH (non-condensing)
Noise Level	< 65 dB @ 1 m/25 ° C/full load/822 V (Vout)
Network Type	TN-S, TN-C, TN-C-S, TT (External RCD required)
Protection	Overcurrent, overvoltage, undervoltage, ground fault, over-temperature, short circuit, insulation monitor, surge protection

User Interface

Display	21.5-inch LCD touchscreen
Cable Length	<ul style="list-style-type: none"> ● Charging cable: <ul style="list-style-type: none"> – 18 feet (5.5 m) Standard – 24.6 feet (7.5 m) Optional ● Industrial plug: 9.8 feet (3 m)
Status Indication	LED/LCD/APP
User Interface	<ul style="list-style-type: none"> ● Autel Charge App ● Autel Charge Cloud
Connectivity	<ul style="list-style-type: none"> ● 4G ● Wi-Fi ● Ethernet
Communication Protocols	OCPP 1.6J (Can be upgraded to OCPP 2.0.1 later)
User Authentication	<ul style="list-style-type: none"> ● APP ● RFID card ● Credit card (Optional) ● Plug & Charge
Wheelchair accessibility	Yes
RFID Reader	<ul style="list-style-type: none"> ● ISO 14443 A + B to part 4 and ISO/IEC 15693 ● Mifare ● NFC

Software Update

Software Update	OTA updates via web portal
-----------------	----------------------------


Certification and Standards

Safety and Compliance	UL 2202, UL 2231-1, UL 2231-2, CSA No. 107.1-16, NEC Article 625, ISO 15118 Plug & Charge
EMC Compliance	FCC 15 Class A
Certification	UL/cUL
Warranty	24 months, warranty extension possible

9.2 Installation Specifications

See the tables below for the operable element specifications:


Pedestal models

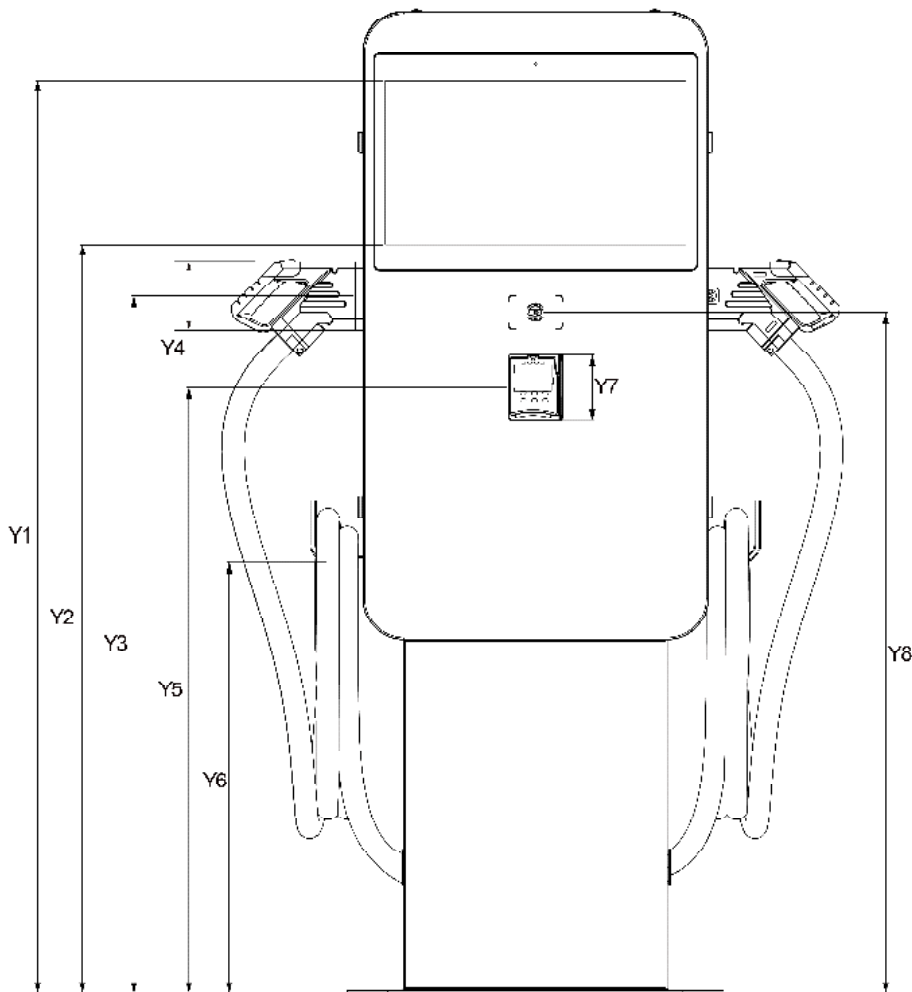

Parameter	Description	Specification	
		inch	mm
Y1	Highest user operable element of the touchscreen	57.2	1454
Y2	Lowest user operable element of the touchscreen	47	1194
Y3	User operable element of the holster	43.7	1110.5
Y4	Height of the connector	4.3	109
Y5	User operable element of the POS	38	965
Y6	Lowest user operable element of the cable holder	27.1	687.5
Y7	Height of the POS	4.1	105

Y8	User operable element of the RFID reader	42.7	1084
----	------------------------------------------	------	------


Trolley models

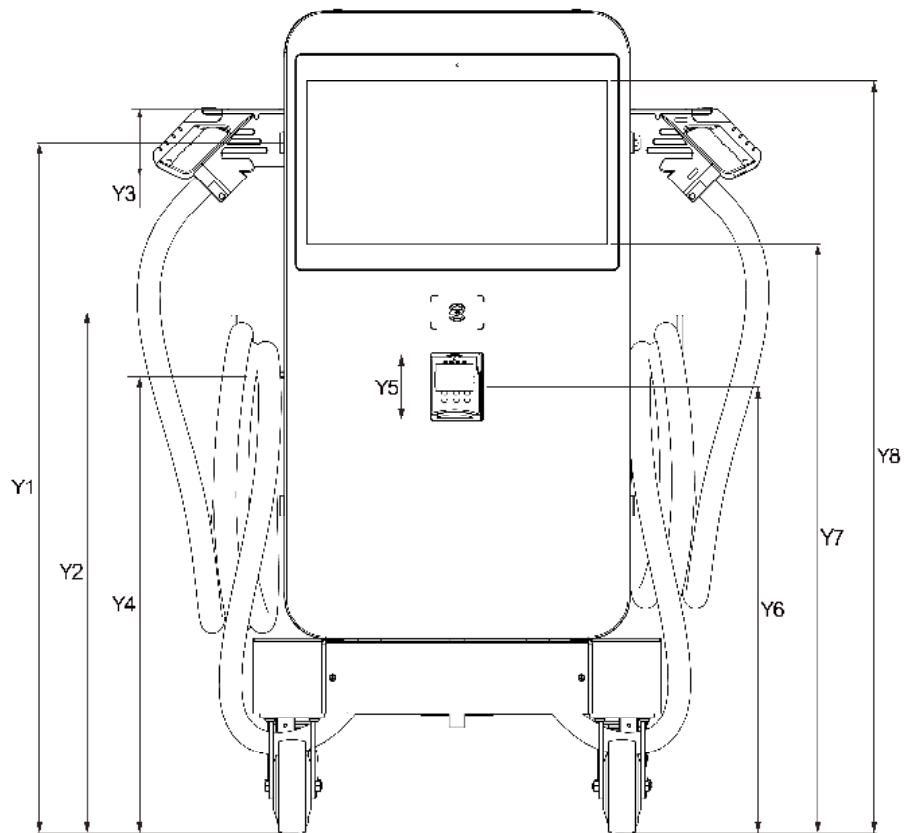


Parameter	Description	Specification	
		inch	mm
Y1	Highest user operable element of the door lock	43.4	1102
Y2	User operable element of the RFID reader	32.8	833
Y3	Height of the connector	4.3	109
Y4	Lowest user operable element of the cable holder	28.7	729
Y5	Height of the POS	4.1	105
Y6	User operable element of the POS	28	712
Y7	Lowest user operable element of the touchscreen	37	941
Y8	Highest user operable element of the touchscreen	47.3	1201

9.3 Product Dimensions

Charger

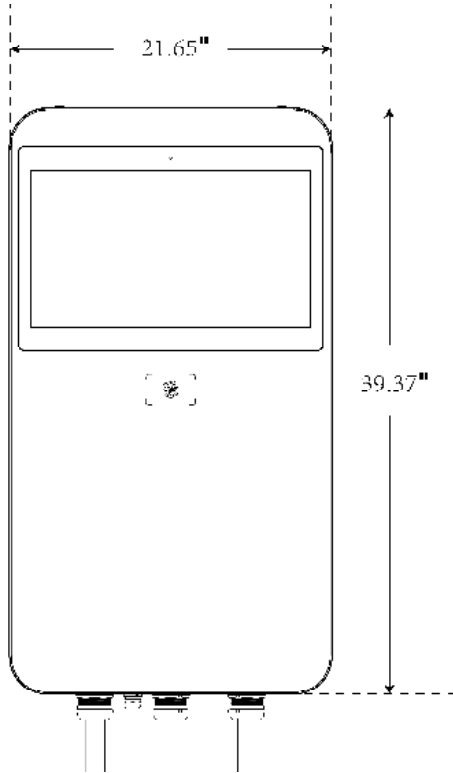


Front View

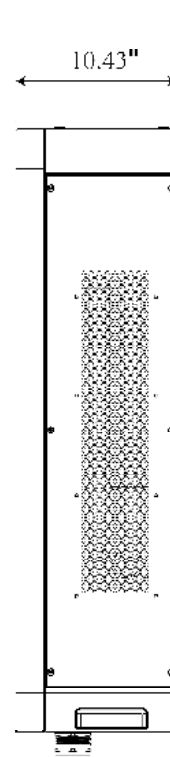


Side View

Pedestal

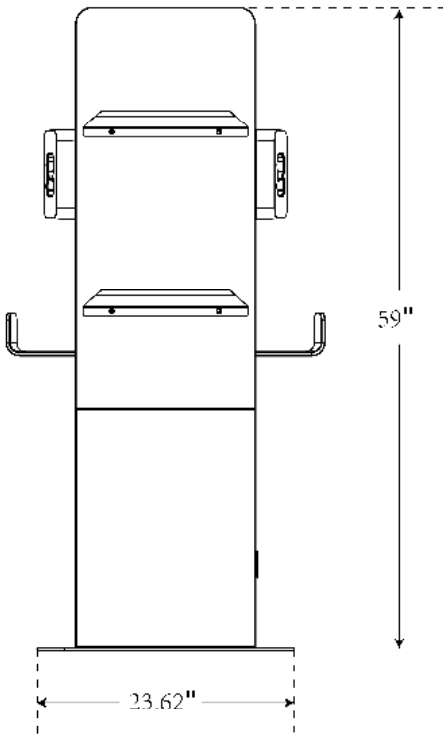


Front View

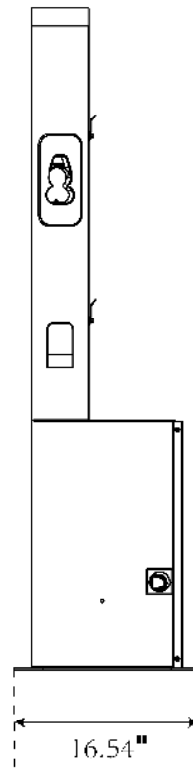


Side View

Trolley

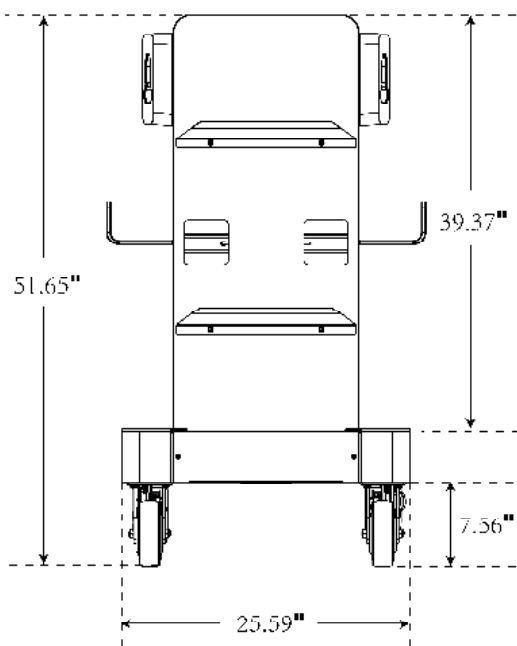

Front View

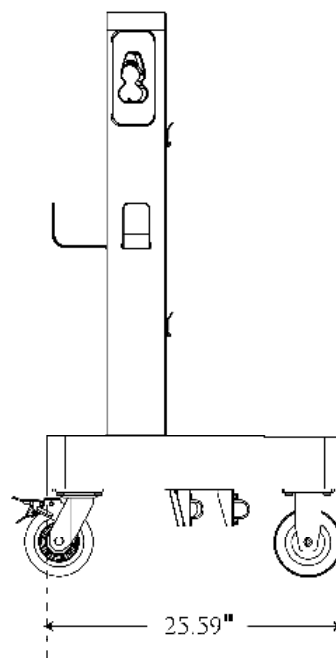

Side View

AUTEL[®]

www.autelenergy.com